JVC

SERVICE MANUAL

STEREO INTEGRATED AMPLIFIER

MODEL No. AX-555BK

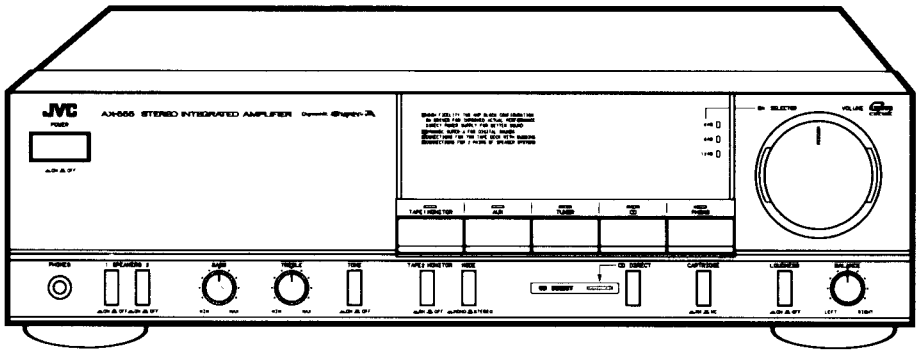

Contents

	Page
Safety Precautions	1-2
Specifications	1-3
Front Panel	1-4
Operation	1-5
Removal Procedures	1-6
Schematic Diagram	Insertion
Block Diagram	Insertion
Internal Block Diagrams of ICs	Insertion
Connection Diagram	Insertion
Parts List	Separate Volume Insertion
Adjustment Procedures	1-7

No. 20037
Mar. 1988

Safety Precautions

1. The design of this product contains special hardware and may circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)
   After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.
   Do not use a line isolation transformer during this check.
   - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).
   - Alternate check method
     Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10 W resistor paralleled by a 0.15 μF AC-type capacitor between an exposed metal part and a known good earth ground.
     Measure the AC voltage across the resistor with the AC voltmeter.
     Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

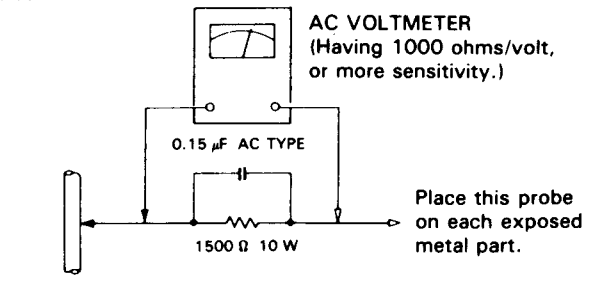
AC VOLTMETER
(Having 1000 ohms/volt, or more sensitivity.)
0.15 μF AC TYPE
1500 Ω 10 W
Place this probe on each exposed metal part.
Good earth ground

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

Specifications

OVERALL CHARACTERISTICS

Output power

100 watts per channel into 4 ohms at 1 kHz (DIN). (For Continental Europe, the United Kingdom and Australia.)

100 watts per channel into 8 ohms at 1 kHz (DIN).

90 watts per channel, min. RMS, both channels driven, into 8 ohms from 20 Hz to 20 kHz, with no more than 0.007% total harmonic distortion.

90 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.003% total harmonic distortion. (measured by JVC Audio Analyzer System)

Total harmonic distortion	: 0.007% (20 Hz – 20 kHz, 8 ohms) at 90 watts
Intermodulation distortion	: 0.007% (60 Hz : 7 kHz = 4 : 1, 8 ohms) at 90 watts
Power band width	: 5 Hz – 50 kHz (IHF, 0.05%, 8 ohms both channels driven)
Frequency response	: 5 Hz – 100 kHz +0, –3 dB (8 ohms)
Damping factor	: 60 (1 kHz, 8 ohms)
Input terminals	
Input sensitivity/ impedance (1 kHz)	
PHONO (MM)	: 2.5 mV/47 kohms
PHONO (MC)	: 200 μV/100 ohms
CD/AUX/ TUNER/TAPE 1, 2	: 200 mV/43 kohms
Signal-to-noise ratio	
PHONO (MM)	: 86 dB ('66 IHF)
PHONO (MC)	: 68 dB ('66 IHF)
CD/AUX/ TUNER/TAPE 1, 2	: 101 dB ('66 IHF)
PHONO (MM) (REC OUT)	: 82 dB ('78 IHF)
PHONO (MC) (REC OUT)	: 75 dB ('78 IHF)
CD/AUX/ TUNER/TAPE 1, 2 (SP OUT)	: 76 dB ('78 IHF)
PHONO (MM)	: 67 dB (DIN)
PHONO (MC)	: 67 dB (DIN)
CD/AUX/ TUNER/TAPE 1, 2	: 68 dB (DIN)
Tone controls	: TREBLE: +8 ±1 dB –8 ±1 dB (at 10 kHz) BASS: +8 ±1 dB –8 ±1 dB (at 100 Hz)
Loudness controls (Volume control at –30 dB position)	: +6 dB (at 100 Hz)

EQUALIZER

PHONO overload capacity	
PHONO (MM)	: 100 mV (0.02% THD)
PHONO (MC)	: 8 mV (0.04% THD)
PHONO RIAA deviation	
PHONO (MM)	: ±0.3 dB (20 Hz – 20 kHz)
PHONO (MC)	: ±0.5 dB (20 Hz – 20 kHz)
Recording output Output level/ impedance	
TAPE REC-1, 2	: 200 mV/Maximum 2 k ohms

GENERAL

Dimensions	: 435 (W) x 125 (H) x 350 (D) mm (17-3/16" x 4-15/16" x 13-13/16")
Weight	: 8.5 kg (18.8 lbs.)

Design and specifications subject to change without notice.

POWER SPECIFICATIONS

Areas	Line voltage & frequency	Power consumption
Continental Europe	AC220V∿, 50Hz	240watts
U.K.	AC240∿, 50Hz	570watts
Australia		
Other areas	AC110/120/220/240V∿selectable, 50/60Hz	210watts

FRONT PANEL

These instructions are prepared for three models: AX-333BK/AX-444BK/AX-555BK.
Therefore, read the items below concerning each model.

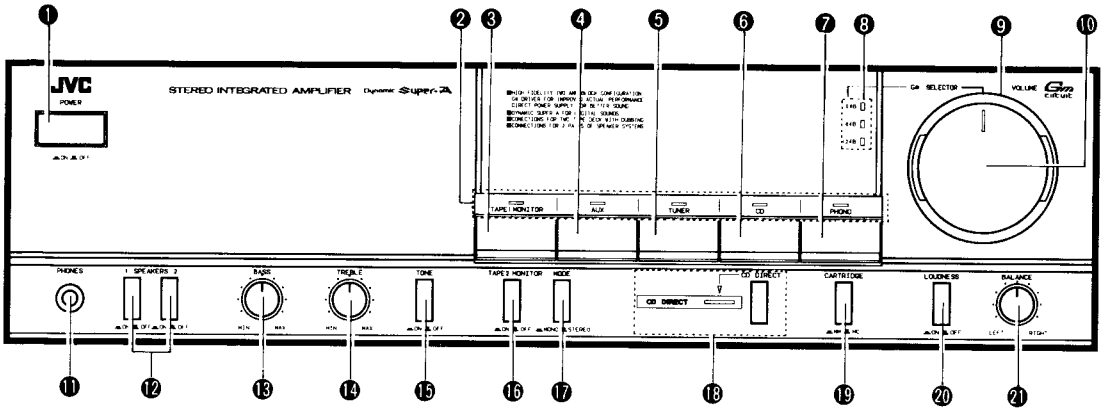

❶ POWER
ON (▬): Press this button to turn the power on.
OFF (▟): Set to this position to turn the power off.

Notes:
- **When power is not supplied to this amplifier for 2 – 3 days, the source select button pressed before the power was switched off may be lost when the power is switched on again. If this happens, set the buttons, etc. again.**
- **An electronic source selector is used in this unit. When the POWER button is first switched on, two or more sources or no source may be selected. Make sure to input the source select data by pressing one of the source selectors.**
- **If the POWER button is pressed repeatedly to switch on and off too quickly, the same phenomenon as the above will occur.**

❷ SOURCE INDICATOR
The indicator corresponding to the source select button pressed lights.

❸ TAPE 1 MONITOR
Press to listen to a tape deck connected to the TAPE 1 terminals.

❹ AUX
Press to listen to the source connected to the AUX terminals.

❺ TUNER
Press to listen to radio broadcasts by a tuner connected to the TUNER terminals.

❻ CD
Press to listen to the source connected to the CD terminals.

❼ PHONO
Press to listen to records played by a turntable connected to the PHONO terminals.

❽ Gm SELECTOR indicators (AX-555BK)
These indicators are illuminated according to the setting of the Gm SELECTOR.
0 dB: Set the Gm SELECTOR so that this indicator lights when listening to a high-volume level.
–6 dB: Set the Gm SELECTOR so that this indicator lights when listening to a middle-volume level.
–12 dB: Set the Gm SELECTOR so that this indicator lights when listening to a low-volume level.

❾ Gm SELECTOR (AX-555BK)
Setting the Gm selector to –6 dB divides the volume at 0 dB by 4 while setting it to –12 dB divides it by 16. As the Gm selector is turned from 0 dB to –6 dB and –12 dB, residual noise becomes progressively less. Use the Gm selector together with the VOLUME control.

❿ VOLUME
Controls the volume of the speakers and headphones.

⓫ PHONES (Headphones jack)
Plug stereo headphones into this jack for private listening.
If you want to listen to sound from the headphones only, press the SPEAKERS buttons to "OFF"

⓬ SPEAKERS
Press to switch the speakers connected to the SPEAKERS 1 or 2 terminals on (▬) and off (▟).

Note: (AX-333BK, AX-444BK)
- **When speakers are connected to only one pair of SPEAKERS terminals, press only the SPEAKERS button of the system connected; if both buttons are pressed, sound will not be heard from either speaker system. When two pairs of speakers are connected and either or both SPEAKERS buttons is/are pressed, sound will be heard from either or both speaker system(s).**

⓭ BASS
Turn clockwise to boost bass response and counterclockwise to decrease it.

⓮ TREBLE
Turn clockwise to boost treble response and counterclockwise to decrease it.

⓯ TONE (AX-444BK, AX-555BK)
ON (▬): Press to adjust the tone with the BASS and TREBLE controls.
DEFEAT (▟): Press to this position to obtain a standard (flat) frequency response.

⓰ TAPE 2 MONITOR
ON (▬): Set to this position to listen to the tape deck connected to the TAPE 2 terminals of this unit. If your tape deck is of the 3-head type, you can monitor the recorded sound while recording by setting this button to ON.
OFF (▟): Keep this button set to this position, except when you want to listen to the tape deck connected to the TAPE 2 terminals of this unit.

⓱ MODE (AX-444BK, AX-555BK)
MONO (▬): Set to this position to have both speakers produce the sound of both the left- and right-channel signals mixed.
STEREO (▟): Normally set to this position.

⓲ CD DIRECT
Press this button to enjoy listening to the CD with good sound quality. The indicator lights and the signal fed from the CD terminals is directly connected to the volume, bypassing the circuits on the way, thus allowing you to enjoy listening to an improved sound quality.

Note:
- **While the CD DIRECT button is pressed, the reproduced sound does not change even if the SOURCE SELECT button (including TAPE 2 MONITOR), MODE button and BALANCE volume are operated, press the CD DIRECT button again to turn the indicator off when using these.**

⓳ CARTRIDGE (AX-444BK, AX-555BK)
MC (▬): Press in when using an MC cartridge having an output of less than 0.5 mV.
MM (▟): Press again when using an MM or MC cartridge having an output of more than 0.5 mV.

⓴ LOUDNESS
ON (▬): To compensate for the ear's lower sensitivity at low listening levels.
OFF (▟): To bypass the LOUDNESS circuit.

㉑ BALANCE
Balances the volume between the left and right speakers. Usually set it to the center click position.

OPERATION

Before operation, always be sure to set VOLUME at minimum.
When the volume is increased after selecting a source position with no equipment connected to the input terminal, other connected devices (such as speakers) may be adversely affected by external noise and inductive hum.

Listening to broadcasts

1. Connect a tuner to the TUNER terminals on the rear panel.
2. Press the POWER button on.
3. Press the TUNER button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
4. Select the speaker system with the SPEAKERS switches.
5. Operate the tuner according to its instruction manual.
6. Adjust the VOLUME, LOUDNESS, BALANCE and BASS/TREBLE controls.

Listening to records

1. Connect a turntable to the PHONO terminals on the rear panel.
2. Press the POWER button on.
3. Set the CARTRIDGE button of this unit according to the cartridge in use. (AX-444BK, AX-555BK)
4. Press the PHONO button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
5. Select the speaker system with the SPEAKERS switches.
6. Operate the turntable according to its instruction manual.
7. Adjust the VOLUME, LOUDNESS, BALANCE and BASS/TREBLE controls.

Listening to tapes

1. Connect a tape deck to the PLAY terminals of TAPE 1 or TAPE 2.
2. Press the POWER button on.
3. Press the TAPE 1 MONITOR button to play back the TAPE 1 deck. For playback of the TAPE 2 deck, press the TAPE 2 MONITOR button to ON (▬).
4. Select the speaker system with the SPEAKERS switches.
5. Operate the tape deck for playback according to its instruction manual.
6. Adjust the playback sound controls as required.

Note:

- **Do not place the tape deck directly on the amplifier, because it may cause the amplifier to malfunction.**

Using stereo headphones

Stereo headphones can be plugged into the front panel jack. Plugging headphones into the PHONES jack does not switch off the speaker sound.

Recording tapes

– Recording from records –

1. Connect a tape deck to the REC terminals of the TAPE 1 or TAPE 2 terminals.
2. Press the POWER button on.
3. Select a speaker system if you wish to hear the sound while recording.
4. Press the PHONO button.
5. Operate the turntable.
6. Operate the tape deck for recording.

– Recording from other sources (TUNER, CD, AUX) –

Press the TUNER, CD or AUX button to record radio broadcasts, or the source connected to the CD, AUX terminals.
All other operations are identical to when recording from disc source.

Note:

- **To record from CD, turn the SOURCE SELECT button to "CD". It is possible to monitor the high quality sound by pressing the CD DIRECT button. When monitoring other sources while recording, press the CD DIRECT button again to turn the indicator off.**

– Recording from other sources (PHONO, TUNER, AUX) while listening to the CD –

1. Select the source that you wish to record to from among the PHONO, TUNER and AUX button.
2. Operate the tape deck for recording.
3. Press the CD DIRECT button.

Tape dubbing

Dubbing from the TAPE 1 to TAPE 2 is carried out as follows:

1. Press the TAPE 1 MONITOR button.
2. Play back the TAPE 1 deck.
3. Operate the TAPE 2 deck for recording.

You can perform tape dubbing while listening to the CD by pressing the CD DIRECT button in addition to the above operations.

Notes:

- **The sound you hear from the speakers or headphones is the source sound, not that being recorded on the tape.**
- **Dubbing from TAPE 2 to TAPE 1 is not possible.**
- **The VOLUME control of this amplifier has no effect on the recording level. Adjust the recording level with the controls on the tape deck.**

How to operate the monitor while recording on the tape deck

1. Connect a 3-head tape deck to the TAPE 1 or TAPE 2 terminals.
2. Make sure to connect the signal cords to the PLAY and REC terminals.
3. Select the source from which you want to record by depressing the source select button on this unit.
4. Operate the tape deck for recording as described in its operating manual.
5. By playing the source component, you can record on the tape deck.
6. While recording on the tape deck, the recorded sound can be heard by depressing the TAPE 1 MONITOR or TAPE 2 MONITOR button on this unit.

Use of S.E.A. Graphic Equalizer

The S.E.A. Graphic Equalizer is JVC's exclusive tone control system. By allowing you to independently boost or lower the response of finely divided sections of the frequency spectrum: the S.E.A. gives you much greater control over the sound quality of your stereo system. With an optionally available S.E.A. Graphic Equalizer, you can tailor the sound to your own taste for different types of music or to compensate for the particular acoustic characteristics of your audio components and listening room.
The TAPE 2 terminals of the AX-333BK, AX-444BK or AX-555BK can be used for connecting the S.E.A. Graphic Equalizer.

Note:

- **Even if the S.E.A. Graphic Equalizer is operated while the CD DIRECT button is pressed, reproduced sound is neither adjusted nor compensated. When using the S.E.A. Graphic Equalizer, press the CD DIRECT button once again to turn the indicator off.**

Removal Procedures

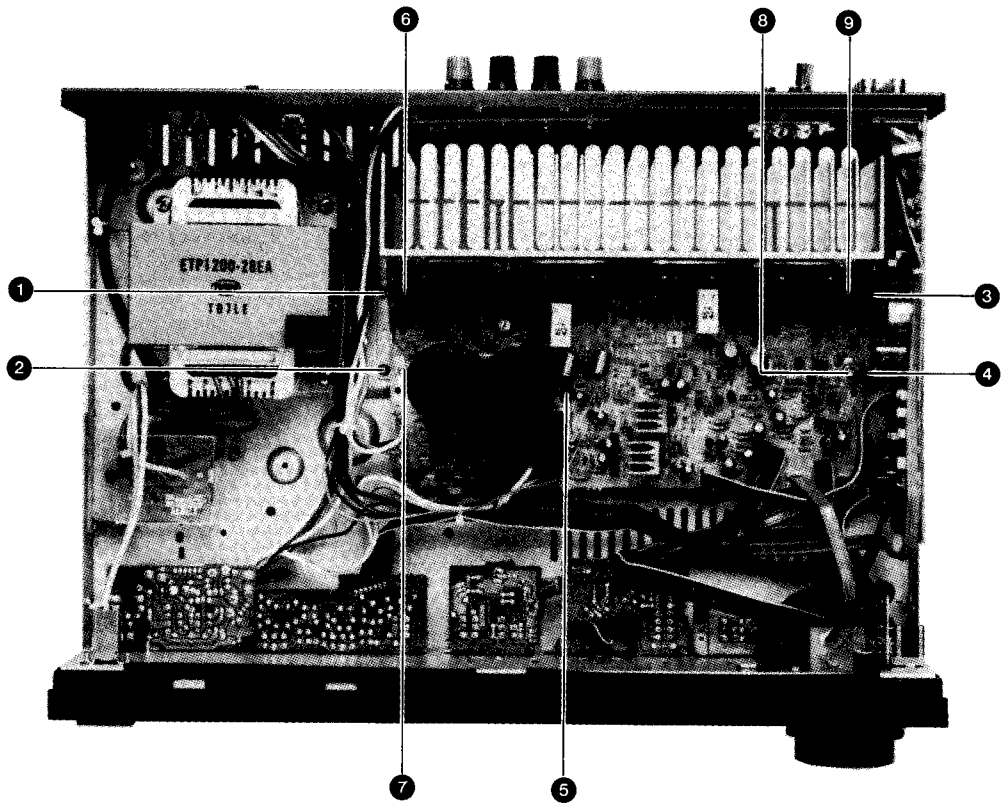

■ Removing the Top Cover

1. Remove six screws.
   Remove the top cover by lifting up its rear section and pulling it backward while holding it on incline.

■ Removing the Front Panel

1. Remove the top cover.
2. Pull out the volume knob and remove the nut.
3. Remove three plastic rivets on the upper part of the front panel and three screws from the lower part.

■ Removing the Power Transistors

1. Remove the top cover.
2. Remove screws ❶—❹.
3. Raise the power amplifier PC board so that the pattern side faces up.
4. Remove solder from the power transistors.
5. Remove screws ❺, ❻ and remove the heatskinks together with the power transistors.
6. Remove the retaining screw from the defective power transistor and replace it.

Schematic Diagram

Notes:

1. ▭ shows DC voltage to the chass
2. ⎓ indicates ± B power supply.
3. ⟶ indicates signal path.

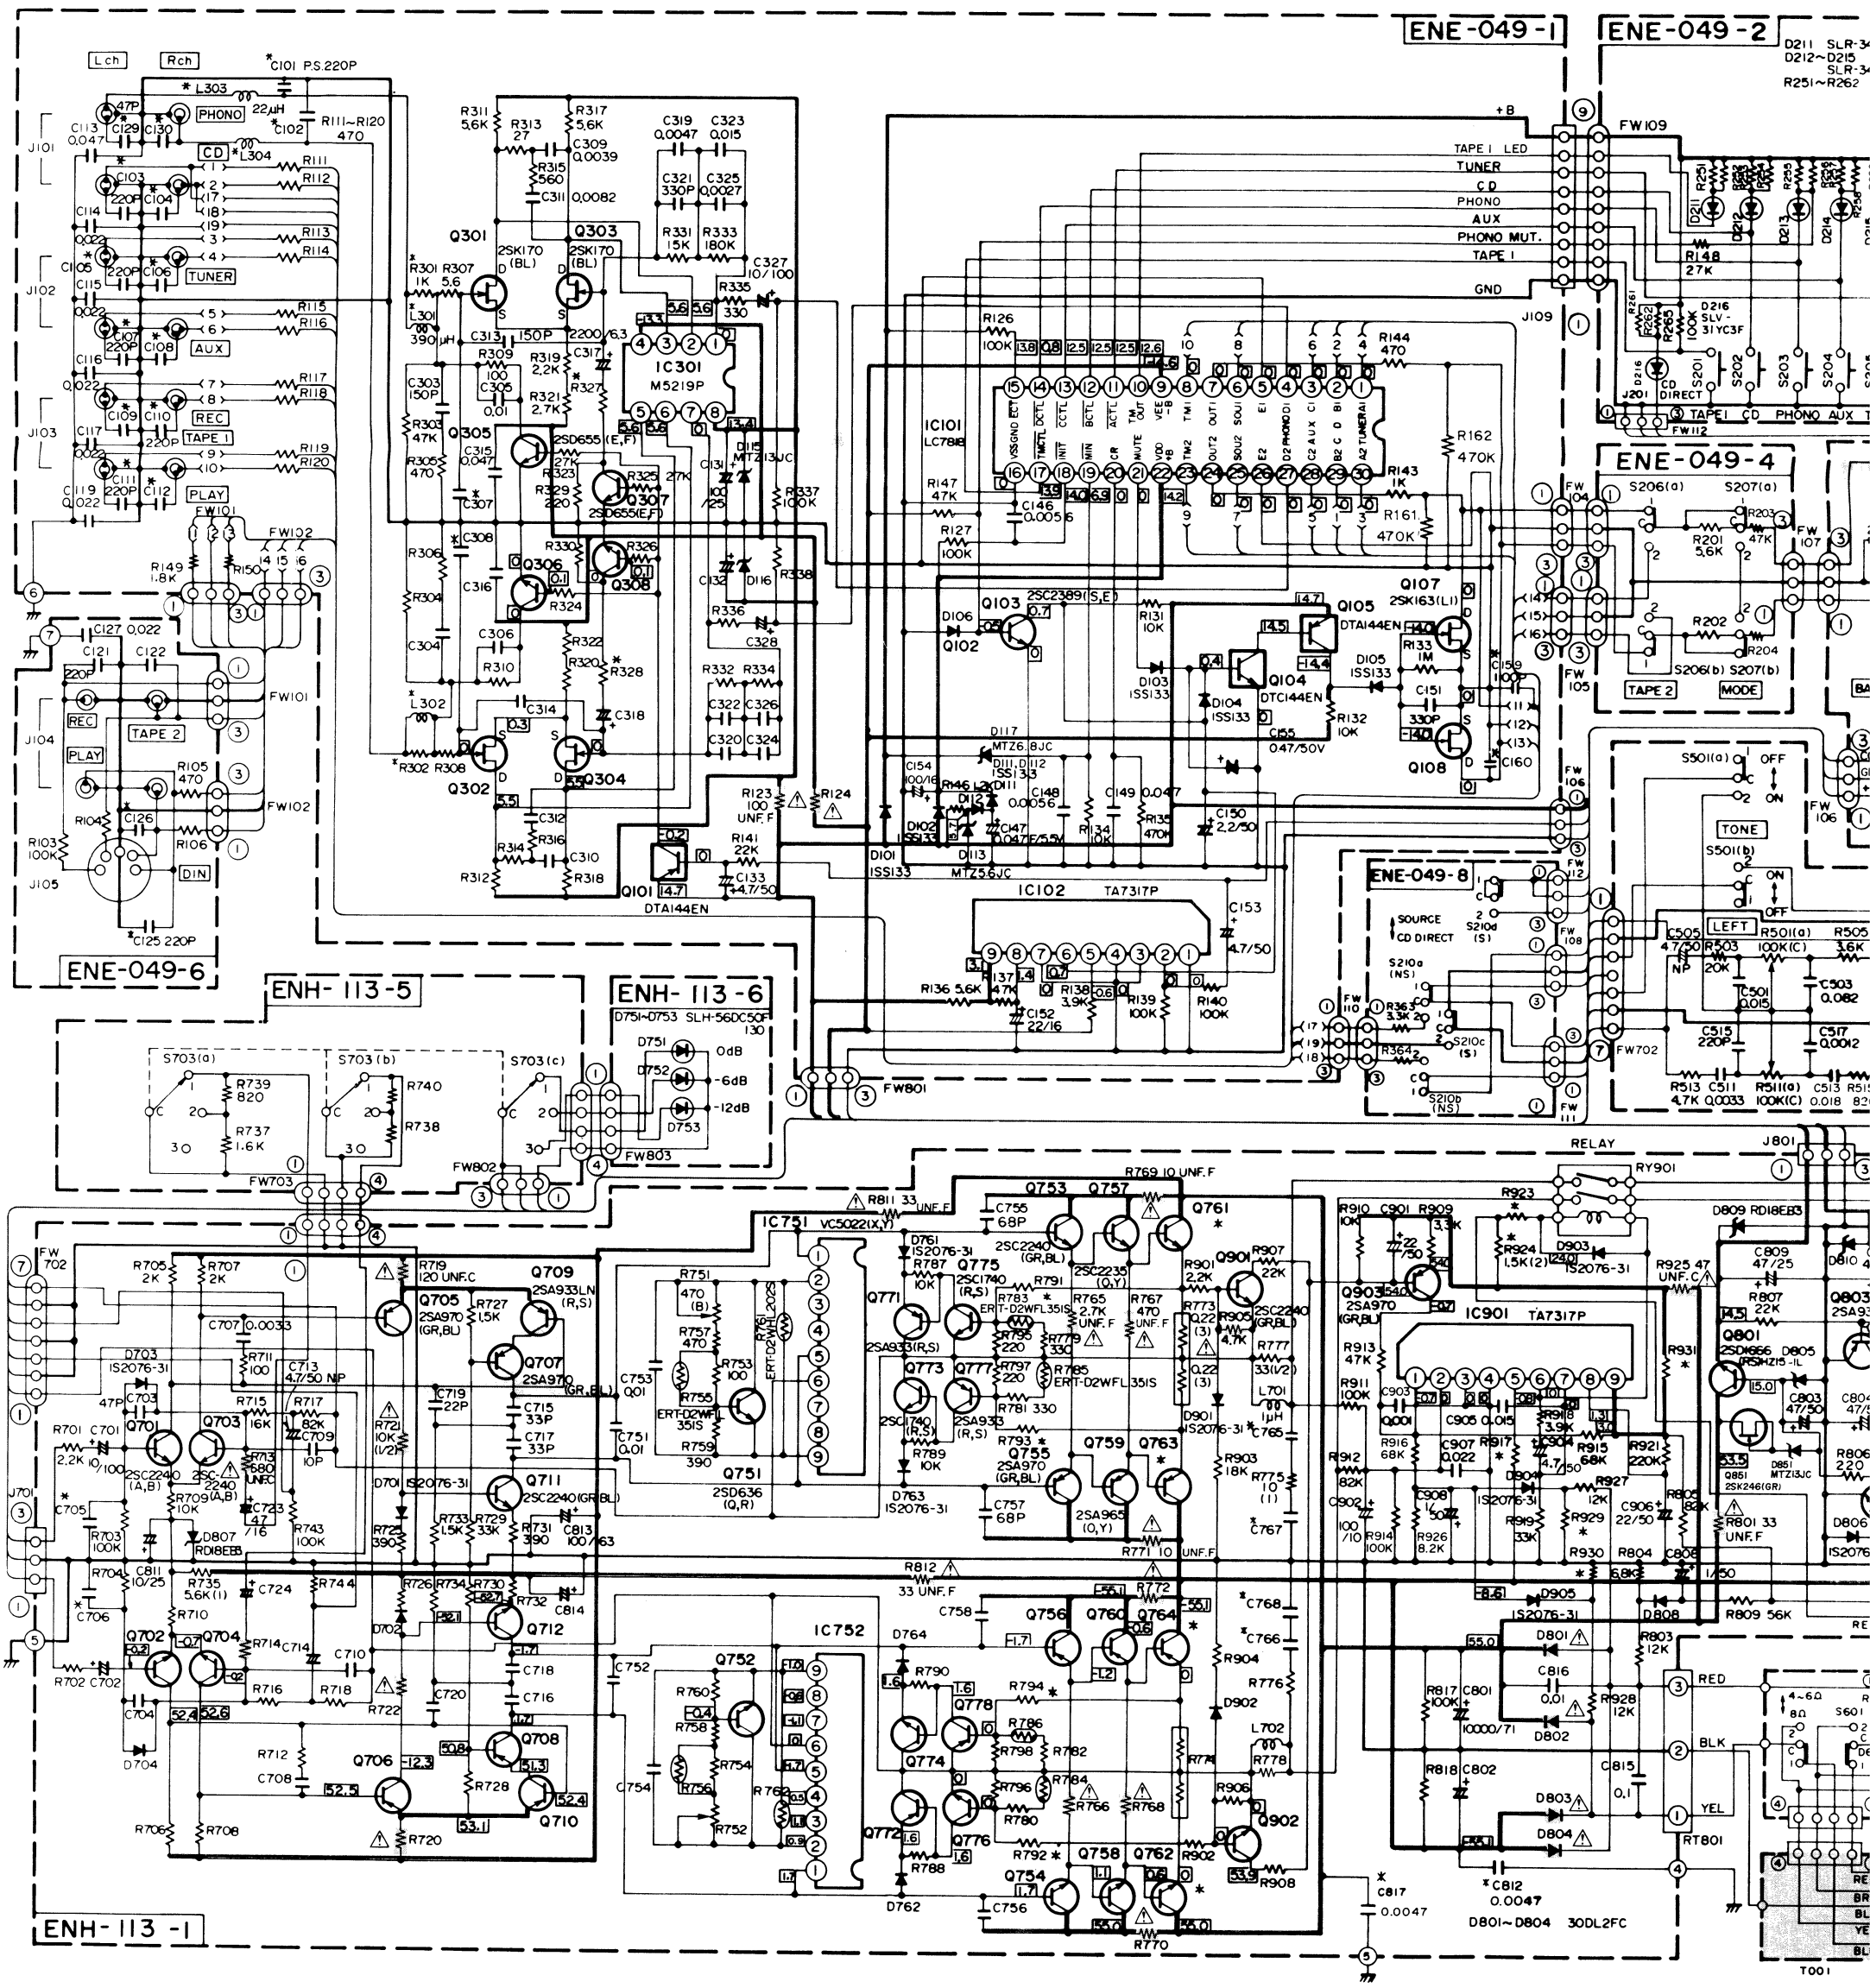

Notes:

1. ▭ shows DC voltage to the chassis with no signal input.
2. ⎓ indicates ± B power supply.
3. ⟶ indicates signal path.
4. When replacing the parts in the darkened area (▒) and those marked with ⚠, be sure to use the designated parts to ensure safety.
5. This is the standard circuit diagram.
   The design and contents are subject to change without notice.

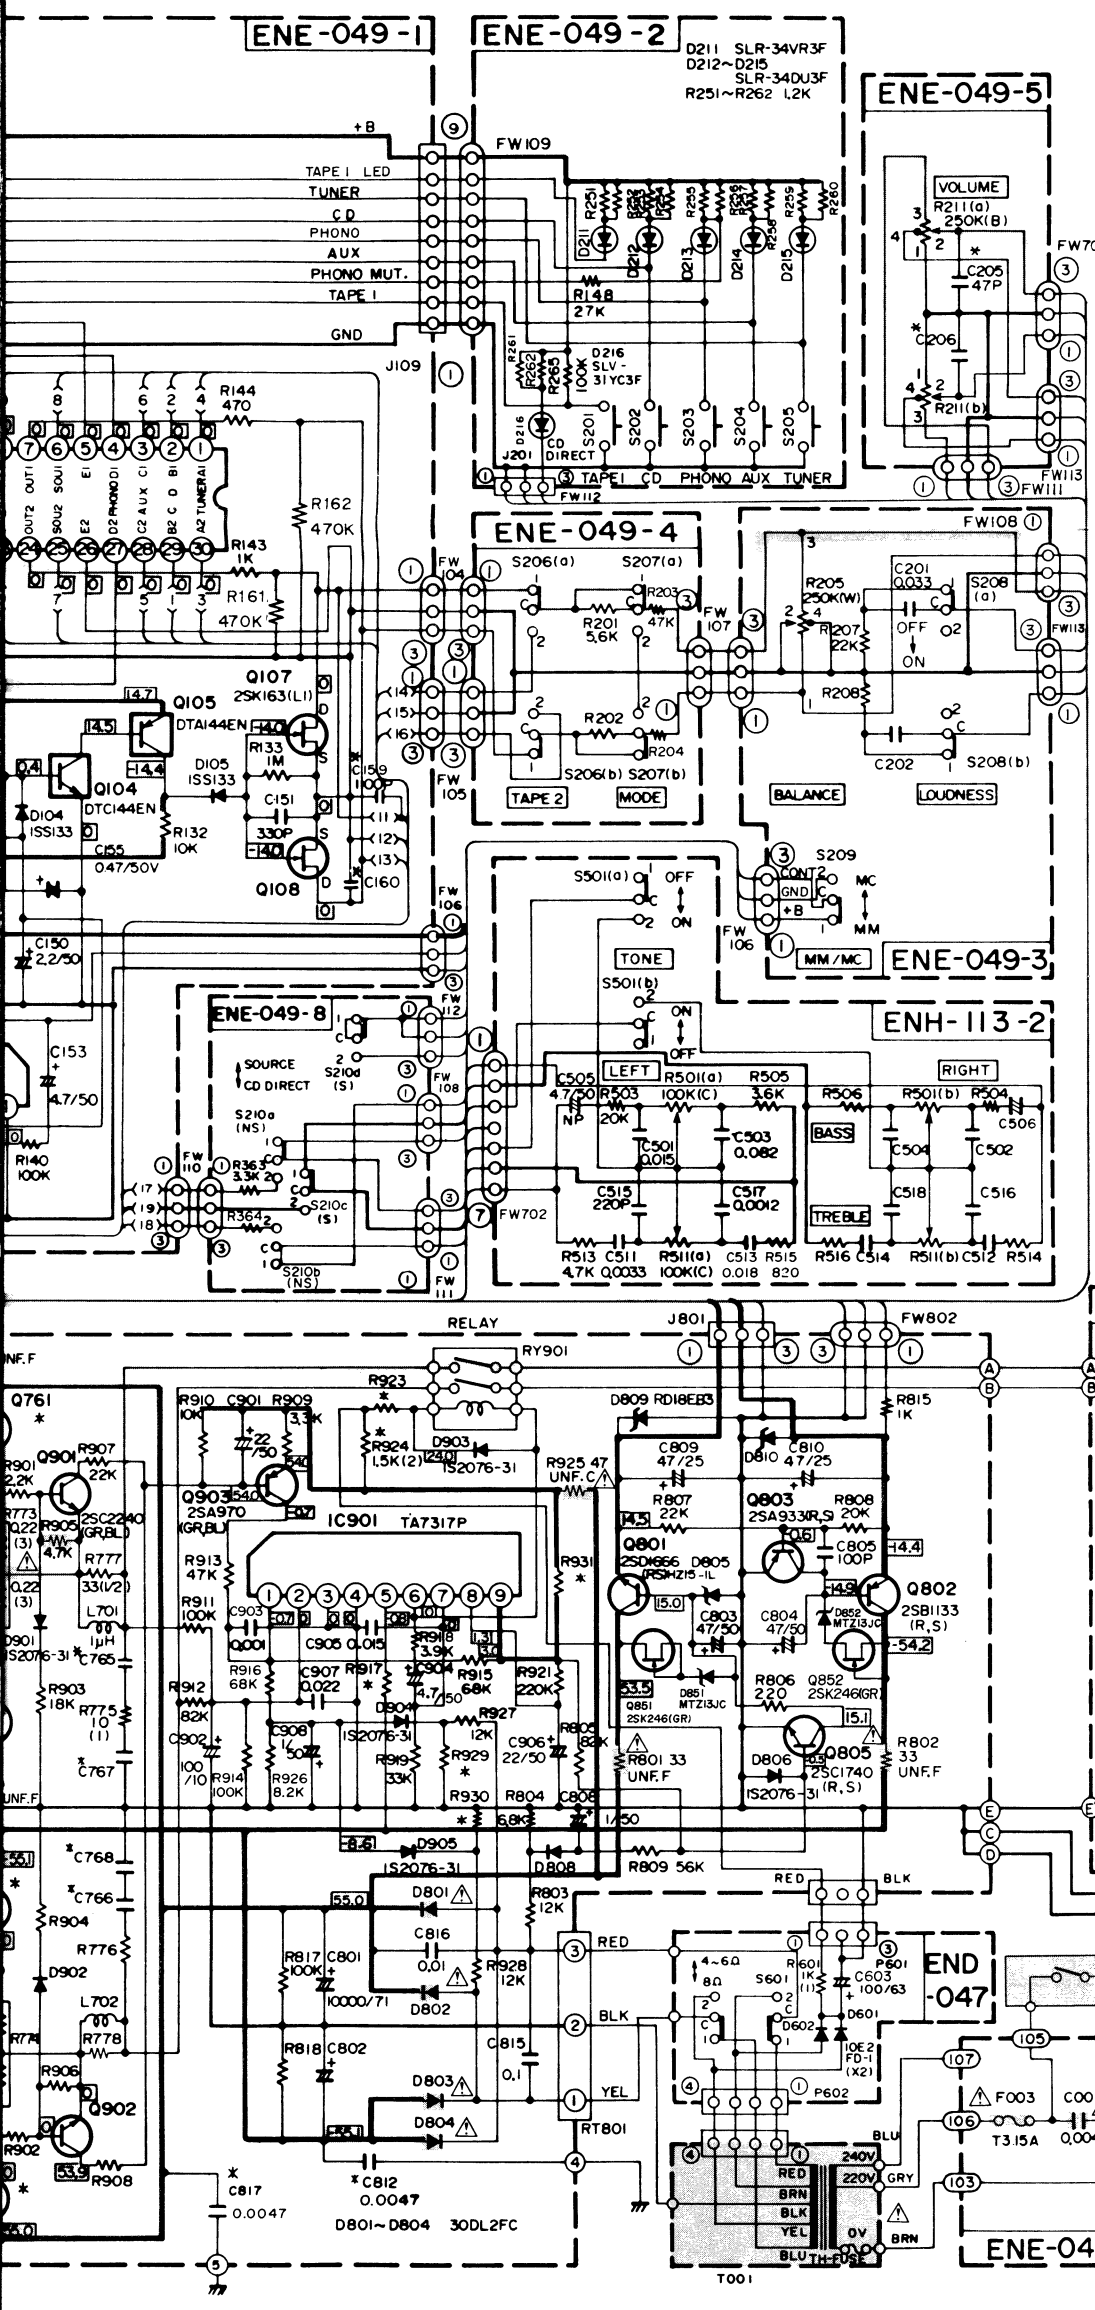

* SYMBOL NO. \ COUNTORY	(G) WEST GERMANY	(E, A, BS) EUROPE	(U, UE, P, PG) OTHERS
C101, C102	USED	NONE	—
C103~C112	USED	NONE	—
C125, C126	USED	NONE	—
C307, C308	330P	47P	—
L301, L302	USED	NONE	—
C731~C733	USED	NONE	—
C761~C764	USED	NONE	—
C765, C766	0.1	0.1	0.047
C767, C768	0.1	0.1	SHORT
C812, C817	USED	NONE	—
R745 ~R748	USED	NONE	—
R301, R302	USED	SHORT	—
C705, C706	NONE	100P	—
C205, C206	USED	NONE	—
R327, R328	15	18	—
C129, C130	USED	NONE	—
L303, L304	USED	SHORT	—
R923	220	220	82
R924	NONE	NONE	USED
R917	18K	18K	20K
R929, R930	8.2K	8.2K	6.8K
R931	27K	27K	30K
R810, R813	10K	10K	12K
Q761, Q762	2SC3857LF(O,Y)	2SC3857LF(O,Y)	2SD845LB(R,O)
Q763, Q764	2SA1493LF(O,Y)	2SA1493LF(O,Y)	2SB755LB(R,O)
R791~R794	430	430	330

Block Diagram

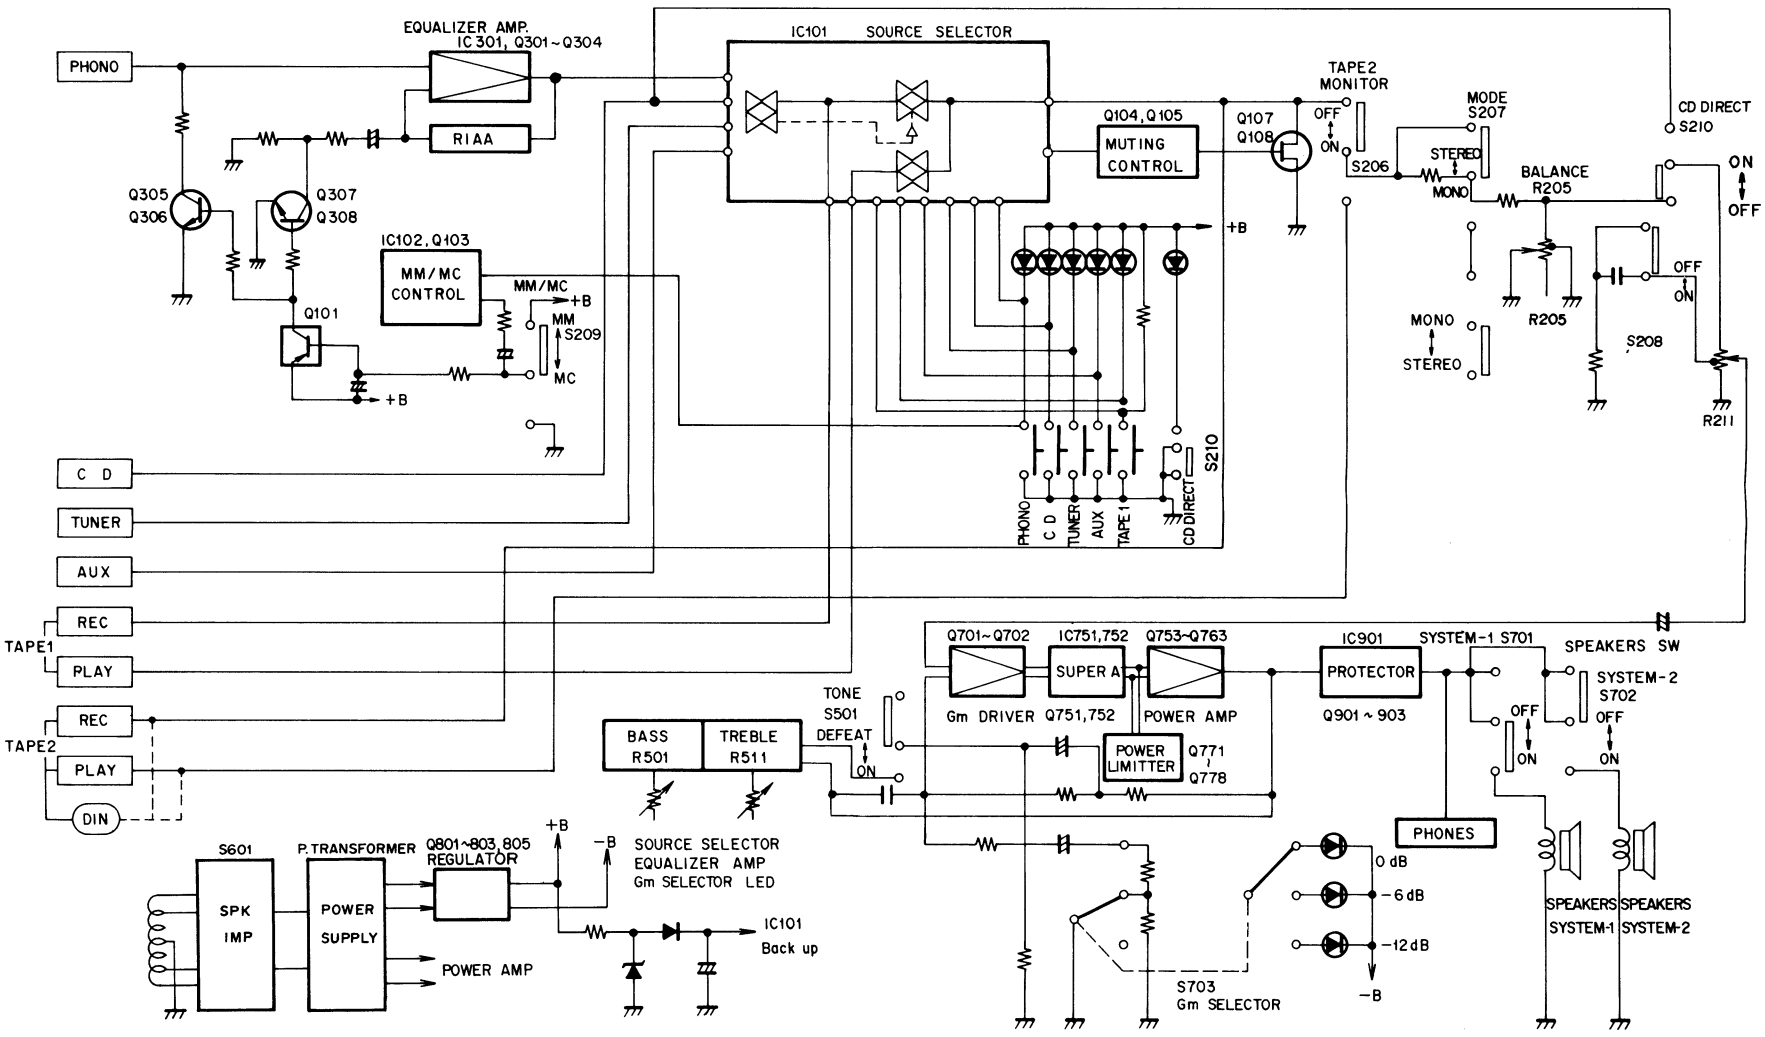

Internal Block Diagram of ICs

■ LC7818 (IC101)

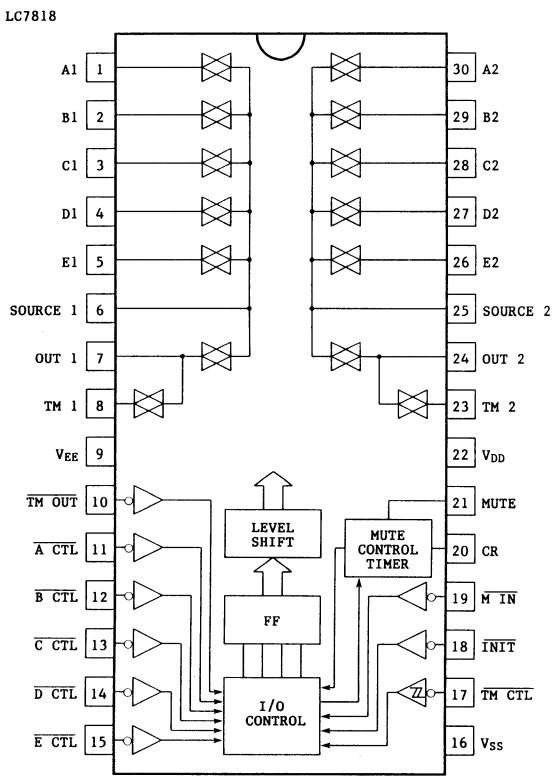

■ VC5022 [X, Y] (IC751, IC752)

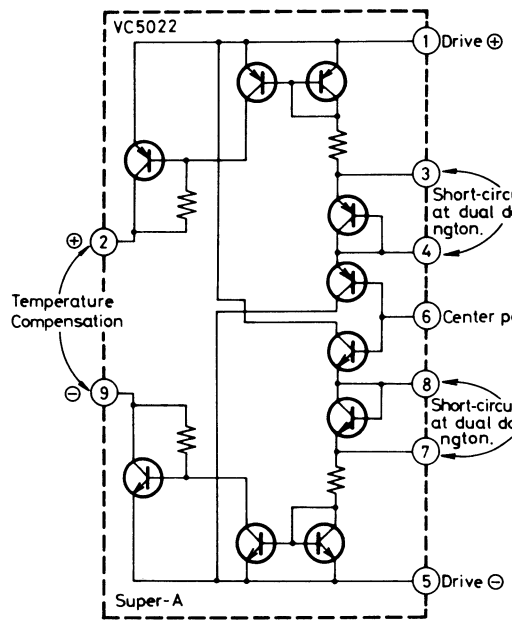

■ M5218P (IC301)

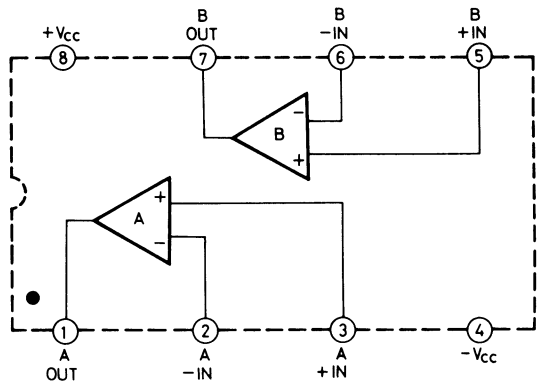

■ TA731P (IC102, IC901)

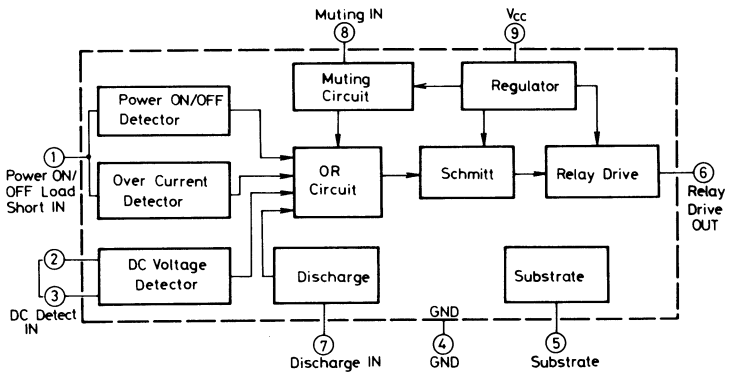

(No. 20037)

Connection Diagram

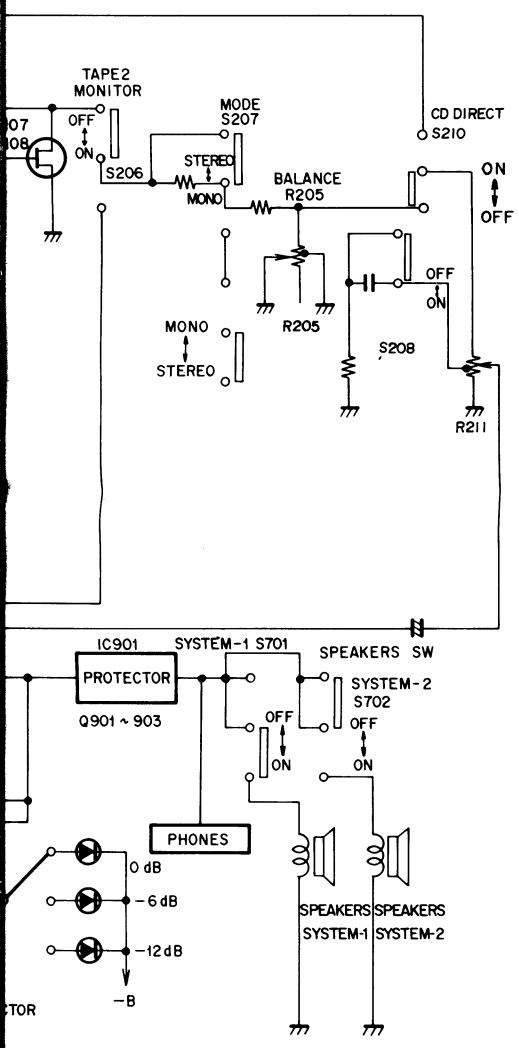

■ M5218P (IC301)

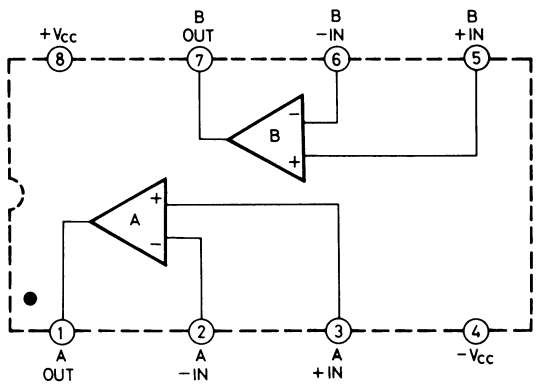

■ TA731P (IC102, IC901)

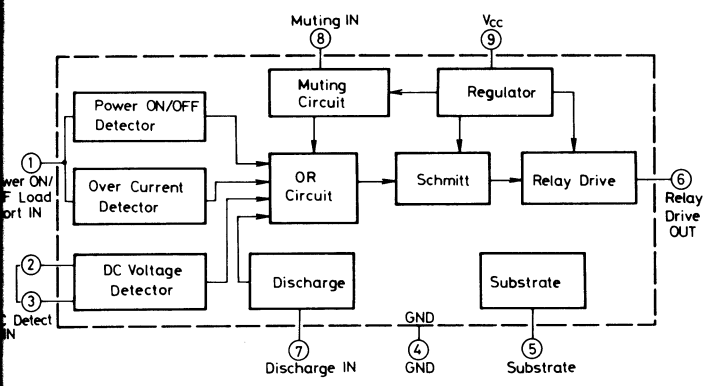

■ Use of New-type Connector

(1) Slide the cover upward.

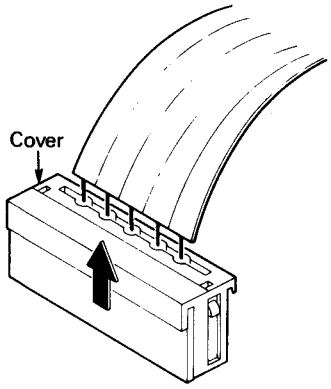

(2) Extract the wires.

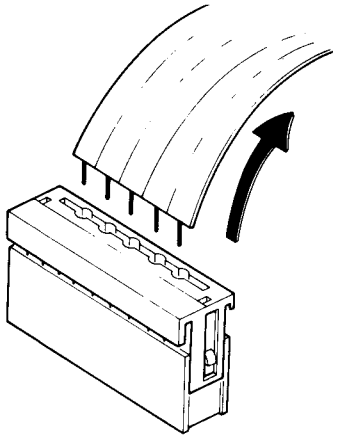

(3) Insert the wires after pushing in the cover.

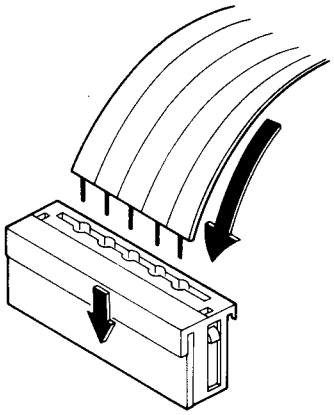

Adjustment Procedures

■ Power Amplifier Idling Adjustment

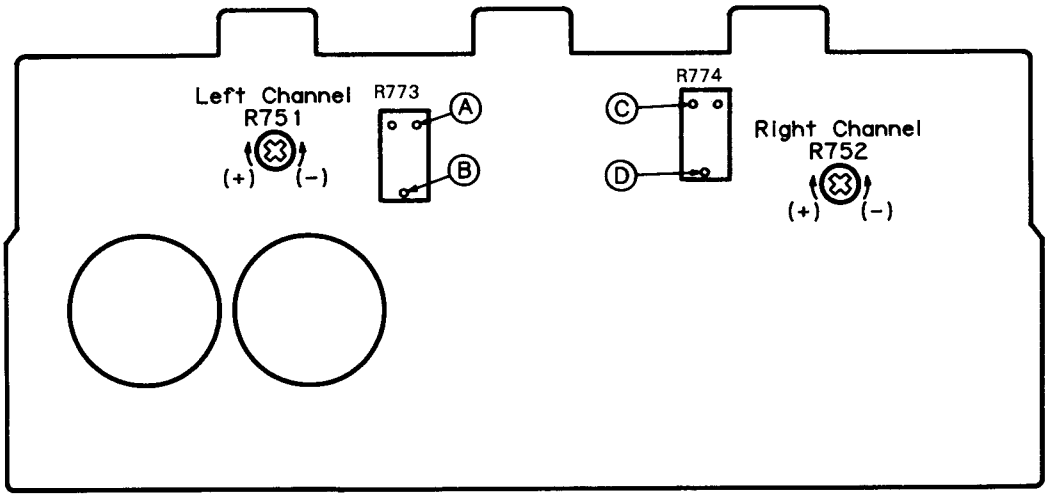

1. Before tuning on the power, turn the semi-fixed resistors (R751 for L channel and R752 for R channel) of the power amplifier circuit board fully counterclockwise.
2. Adjust the semi-fiexed resistor (R751 and R752) so that the voltage at the following test points of the power amplifier circuit board is within a range of 3 ~ 5 mV after the power is turned on.
   L channel: Measure the voltage between test point Ⓐ (emitter of Q761) and output at the test point Ⓑ.
   R channel: Meaure the voltage between test point Ⓒ (emitter of Q762) and output at the test point Ⓓ.
3. Readjust resistors R751 and R752 about 10 minutes after the power is turned on (the heatsink temperature must be sufficiently high) so that the voltage at the test points becomes 11 mV.
   Confirm that the voltage does not vary when the heatsink temperature increases further.
   Note: Be sure to perform the measurement with the probes and cabinet of the measuring equipment separated from the grounding terminals of AX-555BK or other measuring equipment.

PARTS LIST

Contents

	Page
Main Parts Locations	2-2
■ Front View	2-2
■ Top View	2-2
■ Rear View	2-2
Exploded View and Parts Numbers	2-3
Printed Circuit Board Ass'y and Parts List	2-6
■ ENH-113 □ Power Amplifier Board	2-6
■ ENE-049 □ Pre-amplifier PC Board	2-10
■ TPS-318B Voltage Selector PC Board	2-13
■ END-047A Impedance Selector PC Board	2-13
■ END-026A Power Primary PC Board	2-13
Accessories List	2-14
Packing Materials and Part Numbers	2-14

Main Parts Locations

■ Front View

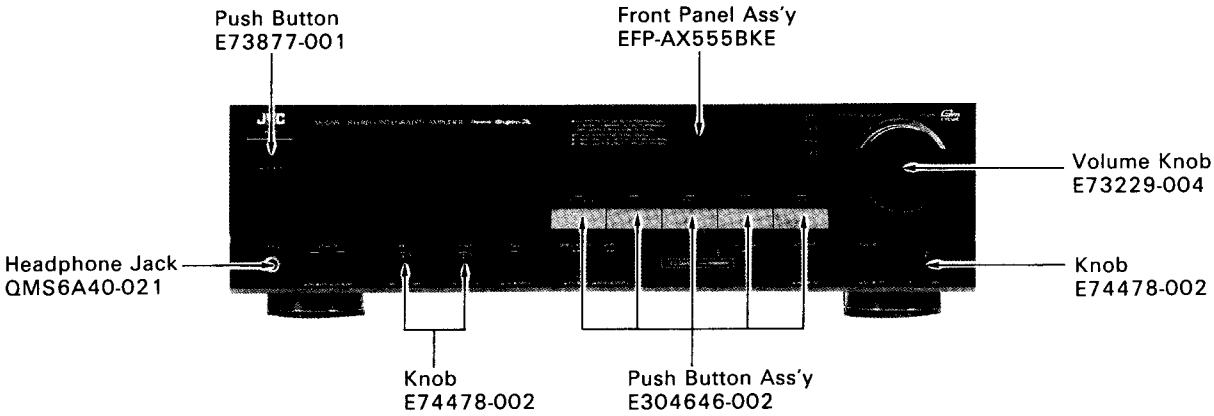

■ Top View

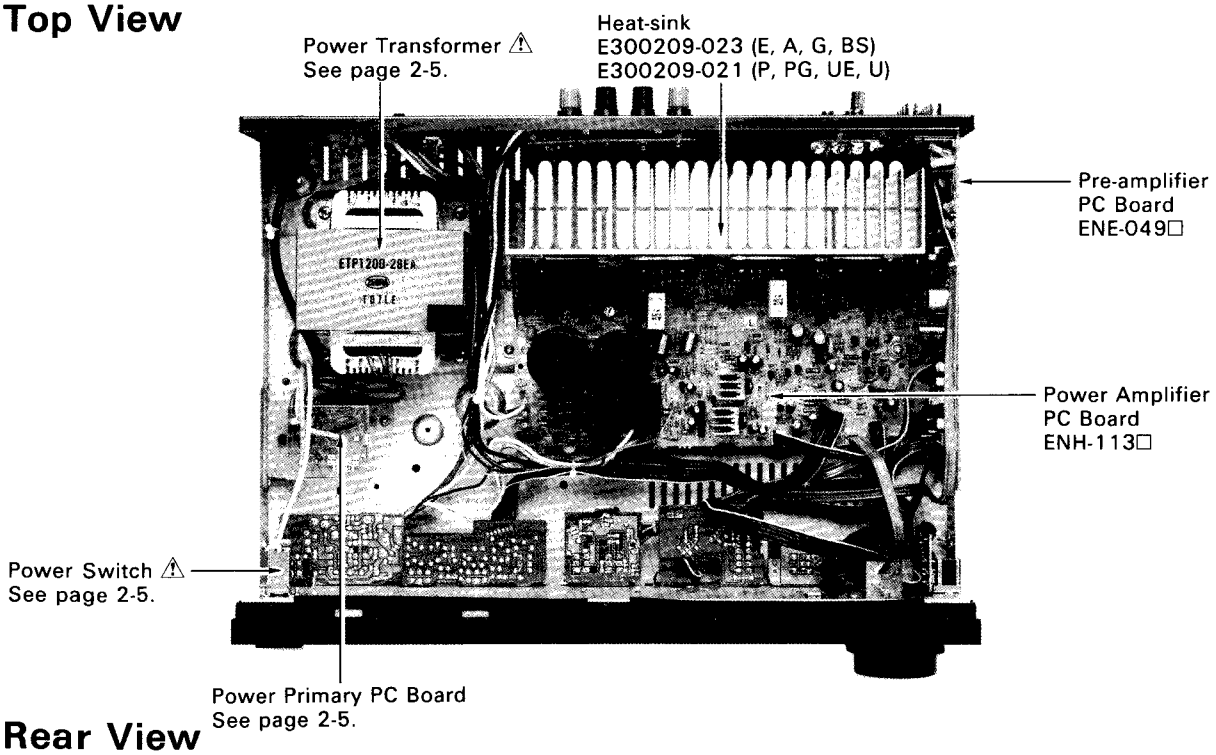

■ Rear View

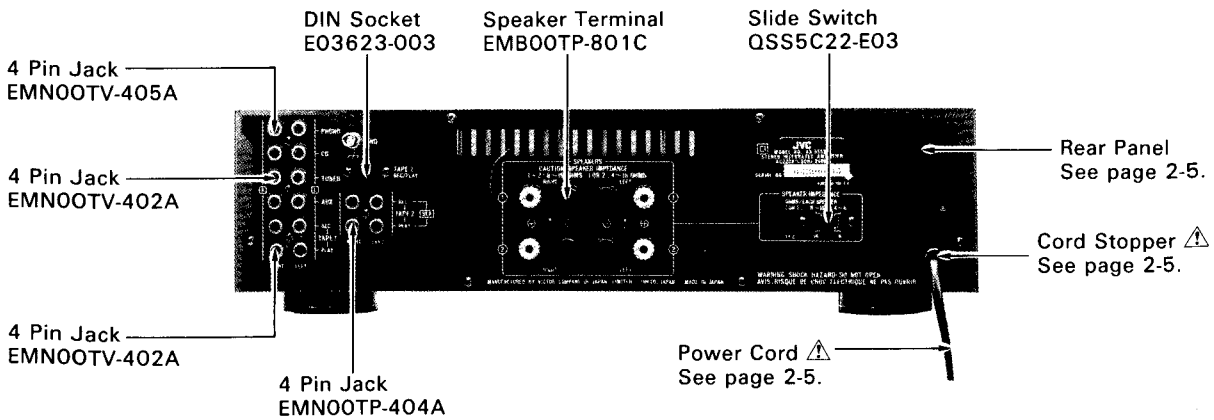

Exploded View and Part Numbers

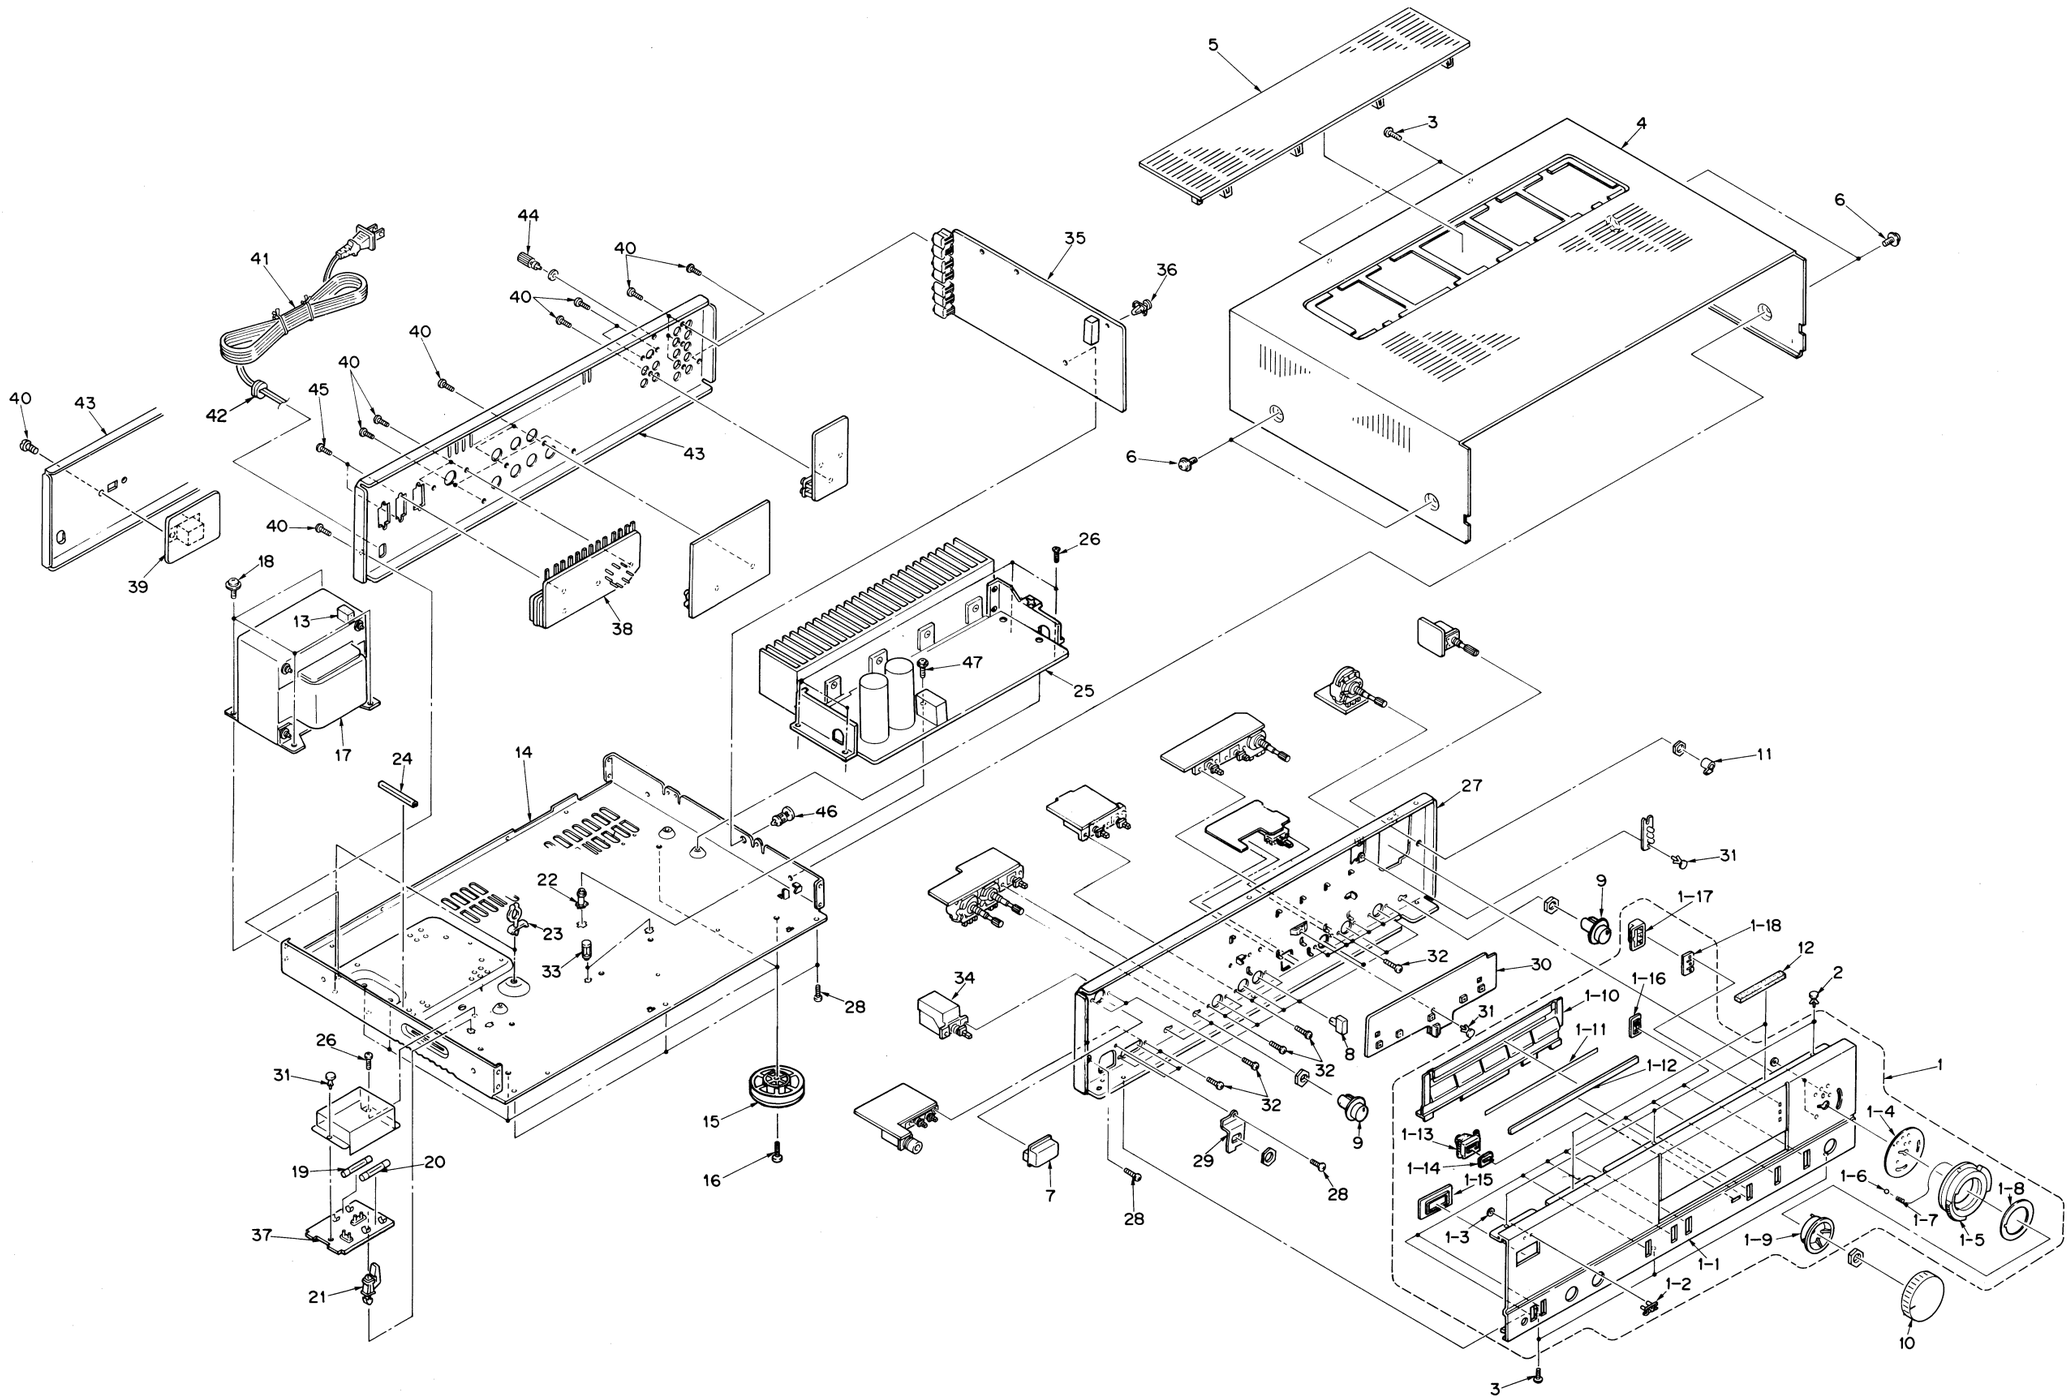

Exploded View and Parts List

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Areas
	1	EFP-AX555BKE	Front Panel Ass'y	1		
	1-1	E25584-004	Front Panel	1		
	1-2	E72968-001	JVC Mark	1		
	1-3	E60912-003	Speed Nut	1		
	1-4	E73226-001	Sheet	1		
	1-5	E304254-003	Knob Ring Ass'y	1	Main Volume	
	1-6	E68428-004	Steel Ball	1		
	1-7	E66722-036	Coil Spring	1		
	1-8	E73227-002	Sheet	1		
	1-9	E304258-002	Knob Bush	1		
	1-10	E304646-002	Push Button Ass'y	1	Function Selector	
	1-11	E72437-010	Sheet	1		
	1-12	E304602-004	Indicator Sheet	1		
	1-13	E305294-001	LED Holder	1		
	1-14	E74626-001	Indicator	1	CD DIRECT	
	1-15	E73878-001	Push Button Escutcheon	1	POWER	
	1-16	E73836-001	Push Button Escutcheon	8		
	2	E48729-009	Plastic Rivet	3		
	3	SBSB3008M	Screw	5		
	4	E24719-011	Metal Cover	1		A,G,P,PG,UE,U
		E24742-004	Metal Cover	1		E,BS
	5	E23862-005	Grill	1		E,BS
	6	E61660-004	Special Screw	4		
	7	E73877-001	Push Button	1	POWER	
	8	E73835-001	Push Button	7		
	9	E74478-002	Knob	3		
	10	E73229-004	Volume Knob	1	Main Volume	
	11	E73228-001	Arm	1		
	12	EX0170007N40S02	Spacer	2		
	13	E3400-375	Felt Spacer	1		
	14	E10653-014	Chassis Base	1		
	15	E74522-001	Foot Ass'y	4		
	16	SBSB3010Z	Screw	4		
⚠	17	ETP1200-28EA	Power Transformer	1		E,A,G
⚠		ETP1200-28EABS	Power Transformer	1		BS
⚠		ETP1200-20FA	Power Transformer	1		P,PG,UE,U
	18	E65389-002	Special Screw	4		
⚠	19	QMF51E2-3R15SBS	Fuse	1	(F002 or F003)	BS
⚠		QMF51A2-3R15S	Fuse	1	(F002 or F003)	except BS
⚠	20	QMF51A2-5R0S	Fuse	1	(F001)	P,PG,UE,U
	21	E34455-001	Fastener	1		
	22	E49946-002	Fastener	1		
	23	QHW1052-001	Wire Clamp	1		E,A,G,BS
		E303704-001	Wire Clamp	2		P,PG,UE,U
	24	E65778-002	Spacer	1		
	25	-----	Power Amplifier PC Board	1	(ENH-113□)	
	26	SBST3006Z	Screw	4		
	27	E25586-002	Front Bracket	1		
	28	SBSB3008CC	Screw	6		
	29	E73218-001	Headphone Bracket	1		
	30	-----	Front PC Board	1	(ENE-049-2)	
	31	E48729-008	Plastic Rivet	2		
	32	SBST3006CC	Screw	14		
	33	E49383-002	Fastener	2		
⚠	34	QSP1106-005	Power Switch	1		E,A,G
⚠		QSP1106-005BS	Power Switch	1		BS
⚠		QSP1106-005	Power Switch	1		P,PG,UE,U
	35	-----	Pre-amplifier PC Board	1	(ENE-049□)	
	36	E69384-002	Fastener	1		
	37	-----	Power Primary PC Board	1	(END-026A)	P,PG,UE,U
		-----	Power Primary PC Board	1	(ENE-049-7)	E,A,G,BS
	38	-----	Voltage Selector PC Board	1	(TPS-318B)	P,PG,UE,U
	39	-----	Impedance Selector PC Board	1	(END-047A)	E,A,G,BS

⚠:Safety Parts

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Areas
	40	E73273-001	Special Screw	16		
⚠	41	QMP3900-200	Power Cord	1		E,G
⚠		QMP2560-244	Power Cord	1		A
⚠		QMP9017-008BS	Power Cord	1		BS
⚠		QMP7600-200	Power Cord	1		P,PG,UE,U
⚠	42	QHS3876-162BS	Cord Stopper	1		BS
⚠		QHS3876-162	Cord Stopper	1		except BS
	43	E25549-023	Rear Panel	1		E,A,G,BS
		E25549-020	Rear Panel	1		P,PG,UE,U
	44	E70078-001	GND Terminal	1		
	45	SDSB3008M	Screw	2		P,PG,UE,U
	46	E303216-003	Fastener	1		
	47	GBSB3008Z	Screw	1		

Note: The Marks for Designated Areas
E ····· Europe
A ····· Australia
G ····· West Germany
BS ····· U.K.
P,PG ····· U.S.Military Market
UE ····· Saudi Arabia
U ····· Other Countries
No Mark indicates all areas.

⚠:Safety Parts

Printed Circuit Board Ass'y and Parts List

■ ENH-113 □ Power amplifier PC Board

Note: ENH-113 □ varies according to the areas employed. See note (1) when placing an order.

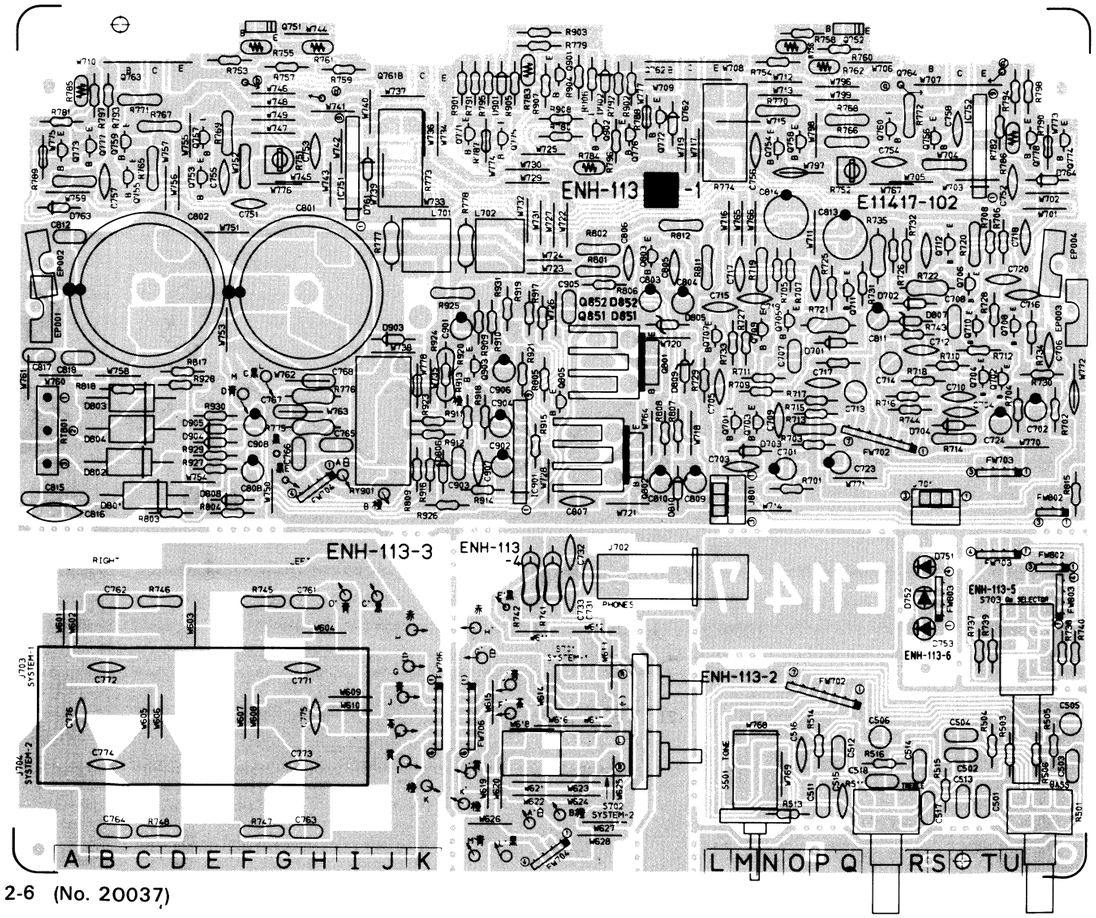

Note (1)

PC Board Ass'y	Designated Areas
ENH-113 [G]	U.S. Military Market & Other Countries
ENH-113 [G]	Saudi Arabia
ENH-113 [H]	Europe, Australia
ENH-113 [H] BS	U.K.
ENH-113 [I]	West Germany

TRANSISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION	MAKER	AREA
	Q701	2SC2240(A,B)	SILICON	TOSHIBA	
	Q702	2SC2240(A,B)	SILICON	TOSHIBA	
	Q703	2SC2240(A,B)	SILICON	TOSHIBA	
	Q704	2SC2240(A,B)	SILICON	TOSHIBA	
	Q705	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q706	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q707	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q708	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q709	2SA933LN(R,S)	SILICON	ROHM	
	Q710	2SA933LN(R,S)	SILICON	ROHM	
	Q711	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q712	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q751	2SD636(Q,R)	SILICON	MATSUSHITA	
	Q752	2SD636(Q,R)	SILICON	MATSUSHITA	
	Q753	2SC2240(BL)	SILICON	TOSHIBA	
	Q754	2SC2240(BL)	SILICON	TOSHIBA	
	Q755	2SA970(BL)	SILICON	TOSHIBA	
	Q756	2SA970(BL)	SILICON	TOSHIBA	
	Q757	2SC2235(O,Y)	SILICON	TOSHIBA	
	Q758	2SC2235(O,Y)	SILICON	TOSHIBA	
	Q759	2SA965(O,Y)	SILICON	TOSHIBA	
	Q760	2SA965(O,Y)	SILICON	TOSHIBA	
	Q761	2SC3857LF(O,Y)	SILICON		H
	Q761	2SC3857LF(O,Y)	SILICON		I
	Q761	2SD845LB(O,R)	SILICON	TOSHIBA	G
	Q762	2SC3857LF(O,Y)	SILICON		H
	Q762	2SC3857LF(O,Y)	SILICON		I
	Q762	2SD845LB(O,R)	SILICON	TOSHIBA	G
	Q763	2SA1493LF(O,Y)	SILICON		H
	Q763	2SA1493LF(O,Y)	SILICON		I
	Q763	2SB755LB(O,R)	SILICON	TOSHIBA	G
	Q764	2SA1493LF(O,Y)	SILICON		H
	Q764	2SA1493LF(O,Y)	SILICON		I
	Q764	2SB755LB(O,R)	SILICON	TOSHIBA	G
	Q771	2SA933(R,S)	SILICON	ROHM	
	Q772	2SA933(R,S)	SILICON	ROHM	
	Q773	2SC1740(R,S)	SILICON	ROHM	
	Q774	2SC1740(R,S)	SILICON	ROHM	
	Q775	2SC1740(R,S)	SILICON	ROHM	
	Q776	2SC1740(R,S)	SILICON	ROHM	
	Q777	2SA933(R,S)	SILICON	ROHM	
	Q778	2SA933(R,S)	SILICON	ROHM	
	Q801	2SD1666(R,S)	SILICON	SANYO	
	Q802	2SB1133(R,S)	SILICON	SANYO	
	Q803	2SA933(R,S)	SILICON	ROHM	
	Q805	2SC1740(R,S)	SILICON	ROHM	
	Q901	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q902	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q903	2SA970(GR,BL)	SILICON	TOSHIBA	

I. C. S

⚠	ITEM	PART NUMBER	DESCRIPTION	MAKER	AREA
	IC751	VC5022(X,Y)	I.C.	ROHM	
	IC752	VC5022(X,Y)	I.C.	ROHM	
	IC901	TA7317P	I.C.	TOSHIBA	

DIODES

⚠	ITEM	PART NUMBER	DESCRIPTION	MAKER	AREA
	D701	1S2076-31	SILICON	HITACHI	
	D702	1S2076-31	SILICON	HITACHI	
	D703	1S2076-31	SILICON	HITACHI	
	D704	1S2076-31	SILICON	HITACHI	
	D751	SLH-56DC50F130	L.E.D.	ROHM	
	D752	SLH-56DC50F130	L.E.D.	ROHM	
	D753	SLH-56DC50F130	L.E.D.	ROHM	
	D761	1S2076-31	SILICON	HITACHI	
	D762	1S2076-31	SILICON	HITACHI	
	D763	1S2076-31	SILICON	HITACHI	
	D764	1S2076-31	SILICON	HITACHI	
	D801	30DL2FC	SILICON	NIHONINTER	
	D802	30DL2FC	SILICON	NIHONINTER	
	D803	30DL2FC	SILICON	NIHONINTER	
	D804	30DL2FC	SILICON	NIHONINTER	
	D805	HZ15-1LTD	ZENER	HITACHI	
	D806	1S2076-31	SILICON	HITACHI	
	D807	RD18EB3	ZENER	NEC	
	D808	1S2076-31	SILICON	HITACHI	
	D809	RD18EB3	ZENER	NEC	
	D810	RD18EB3	ZENER	NEC	
	D901	1S2076-31	SILICON	HITACHI	
	D902	1S2076-31	SILICON	HITACHI	
	D903	1S2076-31	SILICON	HITACHI	
	D904	1S2076-31	SILICON	HITACHI	
	D905	1S2076-31	SILICON	HITACHI	

CAPACITORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	C501	QFN81HK-153	0.015MF	50V	MYLAR	
	C502	QFN81HK-153	0.015MF	50V	MYLAR	
	C503	QFN81HK-823	0.082MF	50V	MYLAR	
	C504	QFN81HK-823	0.082MF	50V	MYLAR	
	C505	QEN51HM-475	4.7MF	50V	NON POLE	
	C506	QEN51HM-475	4.7MF	50V	NON POLE	
	C511	QFN81HK-332	3300PF	50V	MYLAR	
	C512	QFN81HK-332	3300PF	50V	MYLAR	
	C513	QFN81HK-183	0.018MF	50V	MYLAR	
	C514	QFN81HK-183	0.018MF	50V	MYLAR	
	C515	QCS21HJ-221	220PF	50V	CERAMIC	
	C516	QCS21HJ-221	220PF	50V	CERAMIC	
	C517	QFN81HK-122	1200PF	50V	MYLAR	
	C518	QFN81HK-122	1200PF	50V	MYLAR	
	C701	EETB2AM-106E	10MF	100V	ELECTRO	
	C702	EETB2AM-106E	10MF	100V	ELECTRO	
	C703	QCS21HJ-470	47PF	50V	CERAMIC	
	C704	QCS21HJ-470	47PF	50V	CERAMIC	
	C705	QCS21HJ-101	100PF	50V	CERAMIC	G
	C705	QCS21HJ-101	100PF	50V	CERAMIC	H
	C706	QCS21HJ-101	100PF	50V	CERAMIC	G
	C706	QCS21HJ-101	100PF	50V	CERAMIC	H
	C707	QFN81HK-332	3300PF	50V	MYLAR	
	C708	QFN81HK-332	3300PF	50V	MYLAR	
	C709	QCS21HJ-120	12PF	50V	CERAMIC	
	C710	QCS21HJ-120	12PF	50V	CERAMIC	
	C713	QEN51HM-475	4.7MF	50V	NON POLE	
	C714	QEN51HM-475	4.7MF	50V	NON POLE	
	C715	QCS21HJ-330	33PF	50V	CERAMIC	
	C716	QCS21HJ-330	33PF	50V	CERAMIC	
	C717	QCS21HJ-330	33PF	50V	CERAMIC	
	C718	QCS21HJ-330	33PF	50V	CERAMIC	
	C719	QCS21HJ-220	22PF	50V	CERAMIC	
	C720	QCS21HJ-220	22PF	50V	CERAMIC	
	C723	QETB1CM-476	47MF	16V	ELECTRO	
	C724	QETB1CM-476	47MF	16V	ELECTRO	
	C731	QCS21HJ-101	100PF	50V	CERAMIC	I
	C732	QCS21HJ-101	100PF	50V	CERAMIC	I
	C733	QCS21HJ-101	100PF	50V	CERAMIC	I
	C751	QCF21HP-103	0.01MF	50V	CERAMIC	
	C752	QCF21HP-103	0.01MF	50V	CERAMIC	
	C753	QCF21HP-103	0.01MF	50V	CERAMIC	
	C754	QCF21HP-103	0.01MF	50V	CERAMIC	
	C755	QCS32HJ-680	68PF	500V	CERAMIC	
	C756	QCS32HJ-680	68PF	500V	CERAMIC	
	C757	QCS32HJ-680	68PF	500V	CERAMIC	
	C758	QCS32HJ-680	68PF	500V	CERAMIC	
	C761	QFN81HK-103	0.01MF	50V	MYLAR	I
	C762	QFN81HK-103	0.01MF	50V	MYLAR	I
	C763	QFN81HK-103	0.01MF	50V	MYLAR	I

⚠ : SAFETY PARTS

CAPACITORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	C764	QFN81HK-103	0.01MF	50V	MYLAR	I
	C765	QFN81HK-104	0.1MF	50V	MYLAR	H
	C765	QFN81HK-104	0.1MF	50V	MYLAR	I
	C765	QFN81HK-473	0.047MF	50V	MYLAR	G
	C766	QFN81HK-104	0.1MF	50V	MYLAR	H
	C766	QFN81HK-104	0.1MF	50V	MYLAR	I
	C766	QFN81HK-473	0.047MF	50V	MYLAR	G
	C767	QFN81HK-104	0.1MF	50V	MYLAR	H
	C767	QFN81HK-104	0.1MF	50V	MYLAR	I
	C768	QFN81HK-104	0.1MF	50V	MYLAR	H
	C768	QFN81HK-104	0.1MF	50V	MYLAR	I
	C801	EEZ7101-109E	10000MF	71V	ELECTRO	
	C802	EEZ7101-109E	10000MF	71V	ELECTRO	
	C803	QETB1HM-476	47MF	50V	ELECTRO	
	C804	QETB1HM-476	47MF	50V	ELECTRO	
	C805	QCS21HJ-101	100PF	50V	CERAMIC	
	C808	QETB1HM-105	1MF	50V	ELECTRO	
	C809	QETB1EM-476	47MF	25V	ELECTRO	
	C810	QETB1EM-476	47MF	25V	ELECTRO	
	C811	QETB1EM-106	10MF	25V	ELECTRO	
	C812	QFN32AK-472	4700PF	100V	MYLAR	I
	C813	QETB1JM-107	100MF	63V	ELECTRO	
	C814	QETB1JM-107	100MF	63V	ELECTRO	
	C815	QFH42EK-104	0.1MF	250V	M.MYLAR	
	C816	QCE22HP-103A	0.01MF	500V	CERAMIC	
	C817	QFN32AK-472	4700PF	100V	MYLAR	I
	C901	QETB1HM-226	22MF	50V	ELECTRO	
	C902	QETB1AM-107	100MF	10V	ELECTRO	
	C903	QFN81HK-102	1000PF	50V	MYLAR	
	C904	QETB1HM-475	4.7MF	50V	ELECTRO	
	C905	QFN81HK-153	0.015MF	50V	MYLAR	
	C906	QETB1HM-226	22MF	50V	ELECTRO	
	C907	QCF21HP-223	0.022MF	50V	CERAMIC	
	C908	QETB1HM-105	1MF	50V	ELECTRO	

RESISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	R501	QVDB98C-E15B	100K		VARIABLE	
	R503	QRD148J-203S	20K	1/4W	CARBON	
	R504	QRD148J-203S	20K	1/4W	CARBON	
	R505	QRD148J-362S	3.6K	1/4W	CARBON	
	R506	QRD148J-362S	3.6K	1/4W	CARBON	
	R511	QVDB98C-E15B	100K		VARIABLE	
	R513	QRD148J-472S	4.7K	1/4W	CARBON	
	R514	QRD148J-472S	4.7K	1/4W	CARBON	
	R515	QRD148J-821S	820	1/4W	CARBON	
	R516	QRD148J-821S	820	1/4W	CARBON	
	R701	QRD148J-222S	2.2K	1/4W	CARBON	
	R702	QRD148J-222S	2.2K	1/4W	CARBON	
	R703	QRD148J-104S	100K	1/4W	CARBON	
	R704	QRD148J-104S	100K	1/4W	CARBON	
	R705	QRD148J-202S	2K	1/4W	CARBON	
	R706	QRD148J-202S	2K	1/4W	CARBON	
	R707	QRD148J-202S	2K	1/4W	CARBON	
	R708	QRD148J-202S	2K	1/4W	CARBON	
	R709	QRD148J-103S	10K	1/4W	CARBON	
	R710	QRD148J-103S	10K	1/4W	CARBON	
	R711	QRD148J-101S	100	1/4W	CARBON	
	R712	QRD148J-101S	100	1/4W	CARBON	
⚠	R713	QRD14CJ-681S	680	1/4W	UNF.CARBON	
⚠	R714	QRD14CJ-681S	680	1/4W	UNF.CARBON	
	R715	QRD148J-163S	16K	1/4W	CARBON	
	R716	QRD148J-163S	16K	1/4W	CARBON	
	R717	QRD148J-823S	82K	1/4W	CARBON	
	R718	QRD148J-823S	82K	1/4W	CARBON	
⚠	R719	QRD14CJ-121S	120	1/4W	UNF.CARBON	
⚠	R720	QRD14CJ-121S	120	1/4W	UNF.CARBON	
⚠	R721	QRD125J-103	10K	1/2W	UNF.CARBON	
⚠	R722	QRD125J-103	10K	1/2W	UNF.CARBON	
	R725	QRD148J-391S	390	1/4W	CARBON	
	R726	QRD148J-391S	390	1/4W	CARBON	
	R727	QRD148J-152S	1.5K	1/4W	CARBON	
	R728	QRD148J-152S	1.5K	1/4W	CARBON	
	R729	QRD148J-333S	33K	1/4W	CARBON	
	R730	QRD148J-333S	33K	1/4W	CARBON	
	R731	QRD148J-391S	390	1/4W	CARBON	
	R732	QRD148J-391S	390	1/4W	CARBON	
	R733	QRD148J-152S	1.5K	1/4W	CARBON	
	R734	QRD148J-152S	1.5K	1/4W	CARBON	
⚠	R735	QRG012J-562A	5.6K	1W	O.M.FILM	
	R737	QRD148J-162S	1.6K	1/4W	CARBON	
	R738	QRD148J-162S	1.6K	1/4W	CARBON	

RESISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	R739	QRD148J-821S	820	1/4W	CARBON	
	R740	QRD148J-821S	820	1/4W	CARBON	
⚠	R741	QRG022J-331A	330	2W	O.M.FILM	
⚠	R742	QRG022J-331A	330	2W	O.M.FILM	
	R743	QRD148J-104S	100K	1/4W	CARBON	
	R744	QRD148J-104S	100K	1/4W	CARBON	
⚠	R745	QRD14CJ-100S	10	1/4W	UNF.CARBON	I
⚠	R746	QRD14CJ-100S	10	1/4W	UNF.CARBON	I
⚠	R747	QRD14CJ-100S	10	1/4W	UNF.CARBON	I
⚠	R748	QRD14CJ-100S	10	1/4W	UNF.CARBON	I
	R751	QVPC604-471	470	0.3W	VARIABLE	
	R752	QVZ3518-471	470	0.1W	VARIABLE	
	R753	QRD148J-101S	100	1/4W	CARBON	
	R754	QRD148J-101S	100	1/4W	CARBON	
	R755	ERT-D2WFL351S	350	1/4W	THERMISTOR	
	R756	ERT-D2WFL351S	350	1/4W	THERMISTOR	
	R757	QRD148J-471S	470	1/4W	CARBON	
	R758	QRD148J-471S	470	1/4W	CARBON	
	R759	QRD148J-391S	390	1/4W	CARBON	
	R760	QRD148J-391S	390	1/4W	CARBON	
	R761	ERT-D2WHL202S	2K	1/4W	THERMISTOR	
	R762	ERT-D2WHL202S	2K	1/4W	THERMISTOR	
⚠	R765	QRZ0077-272	2.7K	1/4W	FUSIBLE	
⚠	R766	QRZ0077-272	2.7K	1/4W	FUSIBLE	
⚠	R767	QRZ0077-471	470	1/4W	FUSIBLE	
⚠	R768	QRZ0077-471	470	1/4W	FUSIBLE	
⚠	R769	QRZ0077-100	10	1/4W	FUSIBLE	
⚠	R770	QRZ0077-100	10	1/4W	FUSIBLE	
⚠	R771	QRZ0077-100	10	1/4W	FUSIBLE	
⚠	R772	QRZ0077-100	10	1/4W	FUSIBLE	
⚠	R773	ERF032K-R22	0.22	3W	CEMENT	
⚠	R774	ERF032K-R22	0.22	3W	CEMENT	
⚠	R775	QRG012J-100A	10	1W	O.M.FILM	
⚠	R776	QRG012J-100A	10	1W	O.M.FILM	
⚠	R777	QRD125J-330	33	1/2W	UNF.CARBON	
⚠	R778	QRD125J-330	33	1/2W	UNF.CARBON	
	R779	QRD148J-331S	330	1/4W	CARBON	
	R780	QRD148J-331S	330	1/4W	CARBON	
	R781	QRD148J-331S	330	1/4W	CARBON	
	R782	QRD148J-331S	330	1/4W	CARBON	
	R783	ERT-D2WFL351S	350	1/4W	THERMISTOR	
	R784	ERT-D2WFL351S	350	1/4W	THERMISTOR	
	R785	ERT-D2WFL351S	350	1/4W	THERMISTOR	
	R786	ERT-D2WFL351S	350	1/4W	THERMISTOR	
	R787	QRD148J-103S	10K	1/4W	CARBON	
	R788	QRD148J-103S	10K	1/4W	CARBON	
	R789	QRD148J-103S	10K	1/4W	CARBON	
	R790	QRD148J-103S	10K	1/4W	CARBON	
	R791	QRD148J-331S	330	1/4W	CARBON	G
	R791	QRD148J-431S	430	1/4W	CARBON	H
	R791	QRD148J-431S	430	1/4W	CARBON	I
	R792	QRD148J-331S	330	1/4W	CARBON	G
	R792	QRD148J-431S	430	1/4W	CARBON	H
	R792	QRD148J-431S	430	1/4W	CARBON	I
	R793	QRD148J-331S	330	1/4W	CARBON	G
	R793	QRD148J-431S	430	1/4W	CARBON	H
	R793	QRD148J-431S	430	1/4W	CARBON	I
	R794	QRD148J-331S	330	1/4W	CARBON	G
	R794	QRD148J-431S	430	1/4W	CARBON	H
	R794	QRD148J-431S	430	1/4W	CARBON	I
	R795	QRD148J-221S	220	1/4W	CARBON	
	R796	QRD148J-221S	220	1/4W	CARBON	
	R797	QRD148J-221S	220	1/4W	CARBON	
	R798	QRD148J-221S	220	1/4W	CARBON	
⚠	R801	QRZ0077-330	33	1/4W	FUSIBLE	
⚠	R802	QRZ0077-330	33	1/4W	FUSIBLE	
	R803	QRD148J-123S	12K	1/4W	CARBON	
	R804	QRD148J-682S	6.8K	1/4W	CARBON	
	R805	QRD148J-823S	82K	1/4W	CARBON	
	R806	QRD148J-221S	220	1/4W	CARBON	
	R807	QRD148J-223S	22K	1/4W	CARBON	
	R808	QRD148J-203S	20K	1/4W	CARBON	
	R809	QRD148J-563S	56K	1/4W	CARBON	
	R810	QRD148J-103S	10K	1/4W	CARBON	H
	R810	QRD148J-103S	10K	1/4W	CARBON	I
	R810	QRD148J-123S	12K	1/4W	CARBON	G
⚠	R811	QRZ0077-330	33	1/4W	FUSIBLE	
⚠	R812	QRZ0077-330	33	1/4W	FUSIBLE	
	R813	QRD148J-103S	10K	1/4W	CARBON	H
	R813	QRD148J-103S	10K	1/4W	CARBON	I
	R813	QRD148J-123S	12K	1/4W	CARBON	G
	R815	QRD148J-102S	1K	1/4W	CARBON	
	R817	QRD148J-104S	100K	1/4W	CARBON	
	R818	QRD148J-104S	100K	1/4W	CARBON	
	R901	QRD148J-272S	2.7K	1/4W	CARBON	

⚠ : SAFETY PARTS

RESISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	R902	QRD148J-272S	2.7K	1/4W	CARBON	
	R903	QRD148J-183S	18K	1/4W	CARBON	
	R904	QRD148J-183S	18K	1/4W	CARBON	
	R905	QRD148J-472S	4.7K	1/4W	CARBON	
	R906	QRD148J-472S	4.7K	1/4W	CARBON	
	R907	QRD148J-223S	22K	1/4W	CARBON	
	R908	QRD148J-223S	22K	1/4W	CARBON	
	R909	QRD148J-332S	3.3K	1/4W	CARBON	
	R910	QRD148J-103S	10K	1/4W	CARBON	
	R911	QRD148J-104S	100K	1/4W	CARBON	
	R912	QRD148J-823S	82K	1/4W	CARBON	
	R913	QRD148J-473S	47K	1/4W	CARBON	
	R914	QRD148J-104S	100K	1/4W	CARBON	
	R915	QRD148J-683S	68K	1/4W	CARBON	
	R916	QRD148J-683S	68K	1/4W	CARBON	
	R917	QRD148J-183S	18K	1/4W	CARBON	H
	R917	QRD148J-183S	18K	1/4W	CARBON	I
	R917	QRD148J-203S	20K	1/4W	CARBON	G
	R918	QRD148J-392S	3.9K	1/4W	CARBON	
	R919	QRD148J-333S	33K	1/4W	CARBON	
	R921	QRD148J-224S	220K	1/4W	CARBON	
	R923	QRD148J-221S	220	1/4W	CARBON	H
	R923	QRD148J-221S	220	1/4W	CARBON	I
	R923	QRD148J-820S	82	1/4W	CARBON	G
⚠	R924	QRG022J-152A	1.5K	2W	O.M.FILM	G
⚠	R925	QRD14CJ-470S	47	1/4W	UNF.CARBON	
	R926	QRD148J-822S	8.2K	1/4W	CARBON	
	R927	QRD148J-123S	12K	1/4W	CARBON	
	R928	QRD148J-123S	12K	1/4W	CARBON	
	R929	QRD148J-682S	6.8K	1/4W	CARBON	G
	R929	QRD148J-822S	8.2K	1/4W	CARBON	H
	R929	QRD148J-822S	8.2K	1/4W	CARBON	I
	R930	QRD148J-682S	6.8K	1/4W	CARBON	G
	R930	QRD148J-822S	8.2K	1/4W	CARBON	H
	R930	QRD148J-822S	8.2K	1/4W	CARBON	I
	R931	QRD148J-273S	27K	1/4W	CARBON	H
	R931	QRD148J-273S	27K	1/4W	CARBON	I
	R931	QRD148J-303S	30K	1/4W	CARBON	G

OTHERS

⚠	ITEM	PART NUMBER	DESCRIPTION	AREA
		EWS013-255H	SOCKET WIRE	H
		EWS013-255H	SOCKET WIRE	I
		E11417-102	PC BOARD	
		E300107-007	HOLDER	
		E300107-008	HOLDER	
		E300209-021	HEAT SINK	G
		E300209-023	HEAT SINK	H
		E300209-023	HEAT SINK	I
		E33754-001	BAND	
		E70945-H25	HEAT SINK	
		E73265-001	SCREW	
		E73525-001	SCREW	
		GBSB3008CC	SCREW	
		SBSB3008CC	SCREW	
		SBSB3008CC	SCREW	
		WABS3000W	WASHER	
	J701	EMV7112-003	CONNECTOR	
	J702	QMS6A40-021	HEADPHONE JACK	
	J703	EMB00TP-801C	SPEAKER TERMINAL	
	J704	EMB00TP-801C	SPEAKER TERMINAL	
	J801	EMV7112-003	CONNECTOR	
	L701	EQL0001-1R0	INDUCTOR	
	L702	EQL0001-1R0	INDUCTOR	
	S501	QST4102-E08	PUSH SWITCH	
	S701	QST4241-E06	PUSH SWITCH	
	S702	QST4241-E06	PUSH SWITCH	
	S703	QSR6223-201	ROTARY SWITCH	
	EP002	E70859-001	EARTH PLATE	I
	EP004	E70859-001	EARTH PLATE	
	FW702	EWR37B-30SST	FLAT WIRE	
	FW703	EWR34B-13SST	FLAT WIRE	
	FW802	EWR33B-13SST	FLAT WIRE	
	FW803	EWR34B-13SST	FLAT WIRE	
	RT801	E67764-103	WRAPPING TERMINAL	
	RY901	ESK5D24-218	RELAY	

⚠ : SAFETY PARTS

■ ENE-049 □ Pre-amplifier PC Board

Note: ENE-049 □ varies according to the areas employed. See note (1) when placing an order.

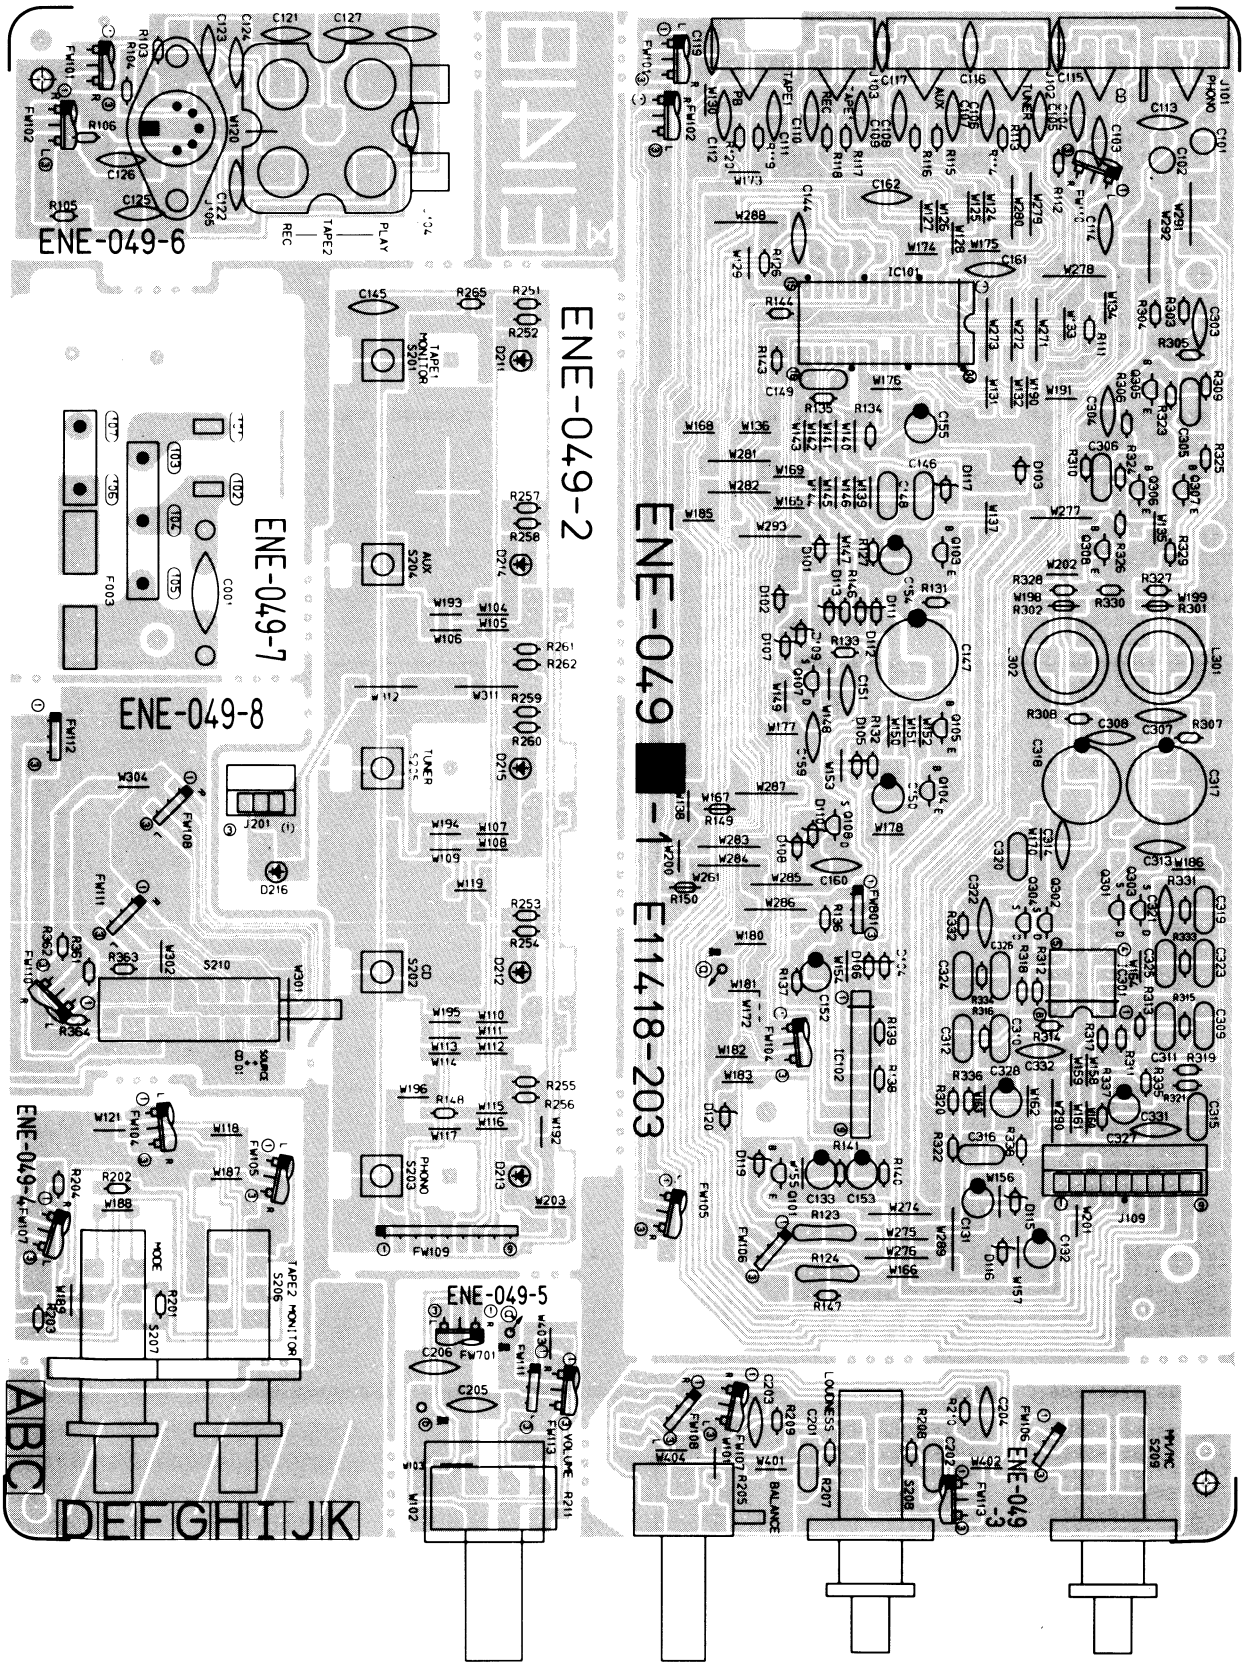

Note (1)

PC Board Ass'y	Designated Areas
ENE-049 [E]	U.S. Military Market & Other Countries
ENE-049 [E]	Saudi Arabia
ENE-049 [F]	Europe, Australia
ENE-049 [G]	West Germany
ENE-049 [H] BS	U.K.

TRANSISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION	MAKER	AREA
	Q101	DTA144EN	SILICON	ROHM	
	Q103	2SC2389(S,E)	SILICON	ROHM	
	Q104	DTC144EN	SILICON	ROHM	
	Q105	DTA144EN	SILICON	ROHM	
	Q107	2SK163(L1)	F.E.T	NEC	
	Q108	2SK163(L1)	F.E.T	NEC	
	Q301	2SK170(BL)	F.E.T	TOSHIBA	
	Q302	2SK170(BL)	F.E.T	TOSHIBA	
	Q303	2SK170(BL)	F.E.T	TOSHIBA	
	Q304	2SK170(BL)	F.E.T	TOSHIBA	
	Q305	2SD655(E,F)	SILICON	HITACHI	
	Q306	2SD655(E,F)	SILICON	HITACHI	
	Q307	2SD655(E,F)	SILICON	HITACHI	
	Q308	2SD655(E,F)	SILICON	HITACHI	

I. C. S

⚠	ITEM	PART NUMBER	DESCRIPTION	MAKER	AREA
	IC101	LC7818	I.C.	SANYO	
	IC102	TA7317P	I.C.	TOSHIBA	
	IC301	M5219P	I.C.	MITSUBISHI	

DIODES

⚠	ITEM	PART NUMBER	DESCRIPTION	MAKER	AREA
	D101	1SS133	SILICON	ROHM	
	D102	1SS133	SILICON	ROHM	
	D103	1SS133	SILICON	ROHM	
	D104	1SS133	SILICON	ROHM	
	D105	1SS133	SILICON	ROHM	
	D106	1SS133	SILICON	ROHM	
	D111	1SS133	SILICON	ROHM	
	D112	1SS133	SILICON	ROHM	
	D113	MTZ5.6JC	ZENER	ROHM	
	D115	MTZ13JC	ZENER	ROHM	
	D116	MTZ13JC	ZENER	ROHM	
	D117	MTZ6.8JC	ZENER	ROHM	
	D211	SLR-34VR3F	L.E.D.	ROHM	
	D212	SLR-34DU3F	L.E.D.	ROHM	
	D213	SLR-34DU3F	L.E.D.	ROHM	
	D214	SLR-34DU3F	L.E.D.	ROHM	
	D215	SLR-34DU3F	L.E.D.	ROHM	
	D216	SLV-31YC3F	L.E.D.	ROHM	

CAPACITORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	C001	QCZ9019-472	4700PF		CERAMIC	F
	C001	QCZ9019-472	4700PF		CERAMIC	G
	C001	QCZ9019-472BS	4700PF		CERAMIC	HBS
	C101	QFS81HJ-221	220PF	50V	POLYSTYROL	G
	C102	QFS81HJ-221	220PF	50V	POLYSTYROL	G
	C103	QCS21HJ-221	220PF	50V	CERAMIC	G
	C104	QCS21HJ-221	220PF	50V	CERAMIC	G
	C105	QCS21HJ-221	220PF	50V	CERAMIC	G
	C106	QCS21HJ-221	220PF	50V	CERAMIC	G
	C107	QCS21HJ-221	220PF	50V	CERAMIC	G
	C108	QCS21HJ-221	220PF	50V	CERAMIC	G
	C109	QCS21HJ-221	220PF	50V	CERAMIC	G
	C110	QCS21HJ-221	220PF	50V	CERAMIC	G
	C111	QCS21HJ-221	220PF	50V	CERAMIC	G
	C112	QCS21HJ-221	220PF	50V	CERAMIC	G
	C113	QCF21HP-473	0.047MF	50V	CERAMIC	
	C114	QCF21HP-223	0.022MF	50V	CERAMIC	
	C115	QCF21HP-223	0.022MF	50V	CERAMIC	
	C116	QCF21HP-223	0.022MF	50V	CERAMIC	
	C117	QCF21HP-223	0.022MF	50V	CERAMIC	
	C119	QCF21HP-223	0.022MF	50V	CERAMIC	
	C121	QCS21HJ-221	220PF	50V	CERAMIC	G
	C122	QCS21HJ-221	220PF	50V	CERAMIC	G
	C125	QCS21HJ-221	220PF	50V	CERAMIC	G
	C126	QCS21HJ-221	220PF	50V	CERAMIC	G
	C127	QCF21HP-223	0.022MF	50V	CERAMIC	
	C131	QETB1EM-107	100MF	25V	ELECTRO	
	C132	QETB1EM-107	100MF	25V	ELECTRO	
	C133	QETB1HM-475	4.7MF	50V	ELECTRO	
	C146	QFN81HJ-562	5600PF	50V	MYLAR	
	C147	EEZ0502-479	47000MF	5.5V	ELECTRO	
	C148	QFN81HJ-562	5600PF	50V	MYLAR	
	C149	QFN81HK-473	0.047MF	50V	MYLAR	
	C150	QETB1HM-225	2.2MF	50V	ELECTRO	
	C151	QCS21HJ-331	330PF	50V	CERAMIC	
	C152	QETB1CM-226	22MF	16V	ELECTRO	
	C153	QETB1HM-475	4.7MF	50V	ELECTRO	
	C154	QETB1CM-107	100MF	16V	ELECTRO	
	C155	QETB1HM-474	0.47MF	50V	ELECTRO	
	C201	QFN81HK-333	0.033MF	50V	MYLAR	
	C202	QFN81HK-333	0.033MF	50V	MYLAR	
	C205	QCS21HJ-470	47PF	50V	CERAMIC	G
	C206	QCS21HJ-470	47PF	50V	CERAMIC	G
	C303	QCS21HJ-151	150PF	50V	CERAMIC	
	C304	QCS21HJ-151	150PF	50V	CERAMIC	
	C305	QFN81HK-103	0.01MF	50V	MYLAR	
	C306	QFN81HK-103	0.01MF	50V	MYLAR	
	C307	QCS21HJ-331	330PF	50V	CERAMIC	G
	C307	QCS21HJ-470	47PF	50V	CERAMIC	E
	C307	QCS21HJ-470	47PF	50V	CERAMIC	F
	C307	QCS21HJ-470	47PF	50V	CERAMIC	HBS
	C308	QCS21HJ-331	330PF	50V	CERAMIC	G
	C308	QCS21HJ-470	47PF	50V	CERAMIC	E
	C308	QCS21HJ-470	47PF	50V	CERAMIC	F
	C308	QCS21HJ-470	47PF	50V	CERAMIC	HBS
	C309	QFN81HK-392	3900PF	50V	MYLAR	
	C310	QFN81HK-392	3900PF	50V	MYLAR	
	C311	QFN81HK-822	8200PF	50V	MYLAR	
	C312	QFN81HK-822	8200PF	50V	MYLAR	
	C313	QCS21HJ-151	150PF	50V	CERAMIC	
	C314	QCS21HJ-151	150PF	50V	CERAMIC	
	C315	QFN81HK-473	0.047MF	50V	MYLAR	
	C316	QFN81HK-473	0.047MF	50V	MYLAR	
	C317	QETB0JM-228	2200MF	6.3V	ELECTRO	
	C318	QETB0JM-228	2200MF	6.3V	ELECTRO	
	C319	QFN81HJ-472	4700PF	50V	MYLAR	
	C320	QFN81HJ-472	4700PF	50V	MYLAR	
	C321	QCS21HJ-331	330PF	50V	CERAMIC	
	C322	QCS21HJ-331	330PF	50V	CERAMIC	
	C323	QFN81HJ-153	0.015MF	50V	MYLAR	
	C324	QFN81HJ-153	0.015MF	50V	MYLAR	
	C325	QFN81HJ-272	2700PF	50V	MYLAR	
	C326	QFN81HJ-272	2700PF	50V	MYLAR	
	C327	EETB2AM-106E	10MF	100V	ELECTRO	
	C328	EETB2AM-106E	10MF	100V	ELECTRO	

⚠ : SAFETY PARTS

RESISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	R103	QRD167J-104	100K	1/6W	CARBON	
	R104	QRD167J-104	100K	1/6W	CARBON	
	R105	QRD167J-471	470	1/6W	CARBON	
	R106	QRD167J-471	470	1/6W	CARBON	
	R111	QRD167J-471	470	1/6W	CARBON	
	R112	QRD167J-471	470	1/6W	CARBON	
	R113	QRD167J-471	470	1/6W	CARBON	
	R114	QRD167J-471	470	1/6W	CARBON	
	R115	QRD167J-471	470	1/6W	CARBON	
	R116	QRD167J-471	470	1/6W	CARBON	
	R117	QRD167J-471	470	1/6W	CARBON	
	R118	QRD167J-471	470	1/6W	CARBON	
	R119	QRD167J-471	470	1/6W	CARBON	
	R120	QRD167J-471	470	1/6W	CARBON	
⚠	R123	QRZ0077-101	100	1/4W	FUSIBLE	
⚠	R124	QRZ0077-101	100	1/4W	FUSIBLE	
	R126	QRD167J-104	100K	1/6W	CARBON	
	R127	QRD167J-104	100K	1/6W	CARBON	
	R131	QRD167J-103	10K	1/6W	CARBON	
	R132	QRD167J-103	10K	1/6W	CARBON	
	R133	QRD167J-105	1M	1/6W	CARBON	
	R134	QRD167J-103	10K	1/6W	CARBON	
	R135	QRD167J-474	470K	1/6W	CARBON	
	R136	QRD167J-562	5.6K	1/6W	CARBON	
	R137	QRD167J-473	47K	1/6W	CARBON	
	R138	QRD167J-392	3.9K	1/6W	CARBON	
	R139	QRD167J-104	100K	1/6W	CARBON	
	R140	QRD167J-104	100K	1/6W	CARBON	
	R141	QRD167J-223	22K	1/6W	CARBON	
	R143	QRD167J-102	1K	1/6W	CARBON	
	R144	QRD167J-102	1K	1/6W	CARBON	
	R146	QRD167J-122	1.2K	1/6W	CARBON	
	R147	QRD167J-473	47K	1/6W	CARBON	
	R148	QRD167J-273	27K	1/6W	CARBON	
	R149	QRD167J-471	470	1/6W	CARBON	G
	R150	QRD167J-471	470	1/6W	CARBON	G
	R201	QRD167J-562	5.6K	1/6W	CARBON	
	R202	QRD167J-562	5.6K	1/6W	CARBON	
	R203	QRD167J-472	4.7K	1/6W	CARBON	
	R204	QRD167J-472	4.7K	1/6W	CARBON	
	R205	QVDA98W-EF5B	250K		VARIABLE	
	R207	QRD167J-223	22K	1/6W	CARBON	
	R208	QRD167J-223	22K	1/6W	CARBON	
	R211	QVDB98B-EF5C	250K		VARIABLE	
	R251	QRD167J-122	1.2K	1/6W	CARBON	
	R252	QRD167J-122	1.2K	1/6W	CARBON	
	R253	QRD167J-122	1.2K	1/6W	CARBON	
	R254	QRD167J-122	1.2K	1/6W	CARBON	
	R255	QRD167J-122	1.2K	1/6W	CARBON	
	R256	QRD167J-122	1.2K	1/6W	CARBON	
	R257	QRD167J-122	1.2K	1/6W	CARBON	
	R258	QRD167J-122	1.2K	1/6W	CARBON	
	R259	QRD167J-122	1.2K	1/6W	CARBON	
	R260	QRD167J-122	1.2K	1/6W	CARBON	
	R261	QRD167J-122	1.2K	1/6W	CARBON	
	R262	QRD167J-122	1.2K	1/6W	CARBON	
	R265	QRD167J-104	100K	1/6W	CARBON	
	R301	QRD167J-102	1K	1/6W	CARBON	G
	R302	QRD167J-102	1K	1/6W	CARBON	G
	R303	QRD167J-473	47K	1/6W	CARBON	
	R304	QRD167J-473	47K	1/6W	CARBON	
	R305	QRD167J-471	470	1/6W	CARBON	
	R306	QRD167J-471	470	1/6W	CARBON	
	R307	QRD167J-5R6	5.6	1/6W	CARBON	
	R308	QRD167J-5R6	5.6	1/6W	CARBON	
	R309	QRD167J-101	100	1/6W	CARBON	
	R310	QRD167J-101	100	1/6W	CARBON	
	R311	QRD167J-562	5.6K	1/6W	CARBON	
	R312	QRD167J-562	5.6K	1/6W	CARBON	
	R313	QRD167J-270	27	1/6W	CARBON	
	R314	QRD167J-270	27	1/6W	CARBON	
	R315	QRD167J-561	560	1/6W	CARBON	
	R316	QRD167J-561	560	1/6W	CARBON	
	R317	QRD167J-562	5.6K	1/6W	CARBON	
	R318	QRD167J-562	5.6K	1/6W	CARBON	
	R319	QRD167J-222	2.2K	1/6W	CARBON	
	R320	QRD167J-222	2.2K	1/6W	CARBON	
	R321	QRD167J-272	2.7K	1/6W	CARBON	
	R322	QRD167J-272	2.7K	1/6W	CARBON	
	R323	QRD167J-273	27K	1/6W	CARBON	
	R324	QRD167J-273	27K	1/6W	CARBON	
	R325	QRD167J-273	27K	1/6W	CARBON	
	R326	QRD167J-273	27K	1/6W	CARBON	
	R327	QRD167J-150	15	1/6W	CARBON	G
	R327	QRD167J-180	18	1/6W	CARBON	E

RESISTORS

⚠	ITEM	PART NUMBER	DESCRIPTION			AREA
	R327	QRD167J-180	18	1/6W	CARBON	F
	R327	QRD167J-180	18	1/6W	CARBON	HBS
	R328	QRD167J-150	15	1/6W	CARBON	G
	R328	QRD167J-180	18	1/6W	CARBON	E
	R328	QRD167J-180	18	1/6W	CARBON	F
	R328	QRD167J-180	18	1/6W	CARBON	HBS
	R329	QRD167J-221	220	1/6W	CARBON	
	R330	QRD167J-221	220	1/6W	CARBON	
	R331	QRD167J-153	15K	1/6W	CARBON	
	R332	QRD167J-153	15K	1/6W	CARBON	
	R333	QRD167J-184	180K	1/6W	CARBON	
	R334	QRD167J-184	180K	1/6W	CARBON	
	R335	QRD167J-331	330	1/6W	CARBON	
	R336	QRD167J-331	330	1/6W	CARBON	
	R337	QRD167J-104	100K	1/6W	CARBON	
	R338	QRD167J-104	100K	1/6W	CARBON	
	R363	QRD167J-332	3.3K	1/6W	CARBON	
	R364	QRD167J-332	3.3K	1/6W	CARBON	

OTHERS

⚠	ITEM	PART NUMBER	DESCRIPTION	AREA
		EMG7331-001	FUSE CLIP	F
		EMG7331-001	FUSE CLIP	G
		EMG7331-001	FUSE CLIP	HBS
		ENZ2006-001	SHIELD CASE	G
		E03532-001	SHIELD CASE	G
		E11418-203	PC BOARD	E
		E11418-203	PC BOARD	F
		E11418-203	PC BOARD	G
		E11418-203BS	PC BOARD	HBS
		E33754-001	BAND	
		E65508-002	TAB	F
		E65508-002	TAB	G
		E65508-002	TAB	HBS
		E67132-T3R15	FUSE LABEL	F
		E67132-T3R15	FUSE LABEL	G
		E67132-T3R15	FUSE LABEL	HBS
		E67764-202	WRAPPING TERMINAL	F
		E67764-202	WRAPPING TERMINAL	G
		E67764-202	WRAPPING TERMINAL	HBS
		E67764-203	WRAPPING TERMINAL	F
		E67764-203	WRAPPING TERMINAL	G
		E67764-203	WRAPPING TERMINAL	HBS
	J101	EMN00TV-405A	4P PIN JACK	
	J102	EMN00TV-402A	4P PIN JACK	
	J103	EMN00TV-402A	4P PIN JACK	
	J104	EMN00TP-404A	4P PIN JACK	
	J105	E03623-003	DIN SOCKET	
	J109	EMV7112-009	CONNECTOR	
	J201	EMV7112-003R	CONNECTOR	
	L301	EQL0111-391	INDUCTOR	G
	L302	EQL0111-391	INDUCTOR	G
	S201	ESP0001-007	TACT SWITCH	
	S202	ESP0001-007	TACT SWITCH	
	S203	ESP0001-007	TACT SWITCH	
	S204	ESP0001-007	TACT SWITCH	
	S205	ESP0001-007	TACT SWITCH	
	S206	QST4262-E02	PUSH SWITCH	
	S207	QST4262-E02	PUSH SWITCH	
	S208	QST4102-E08	PUSH SWITCH	
	S209	QST4102-E08	PUSH SWITCH	
	S210	QST4102-E09	PUSH SWITCH	
	FW101	EWR23C-16NN	FLAT WIRE	
	FW102	EWR23C-16NN	FLAT WIRE	
	FW104	EWR23C-25NN	FLAT WIRE	
	FW105	EWR23C-25NN	FLAT WIRE	
	FW106	EWR33B-16SST	FLAT WIRE	
	FW107	EWR23C-25NN	FLAT WIRE	
	FW108	EWR33B-20SST	FLAT WIRE	
	FW109	EWR39B-16KST	FLAT WIRE	
	FW110	EWR23C-40NN	FLAT WIRE	
	FW111	EWR33B-20SST	FLAT WIRE	
	FW112	EWR33B-16KST	FLAT WIRE	
	FW113	EWR23C-20NN	FLAT WIRE	
	FW701	EWR23C-16JN	FLAT WIRE	
	FW801	EWR33B-16KST	FLAT WIRE	

⚠ : SAFETY PARTS

■ TPS-318B Voltage Selector PC Board

(Except for Europe, West Germany, the U.K. and Australia)

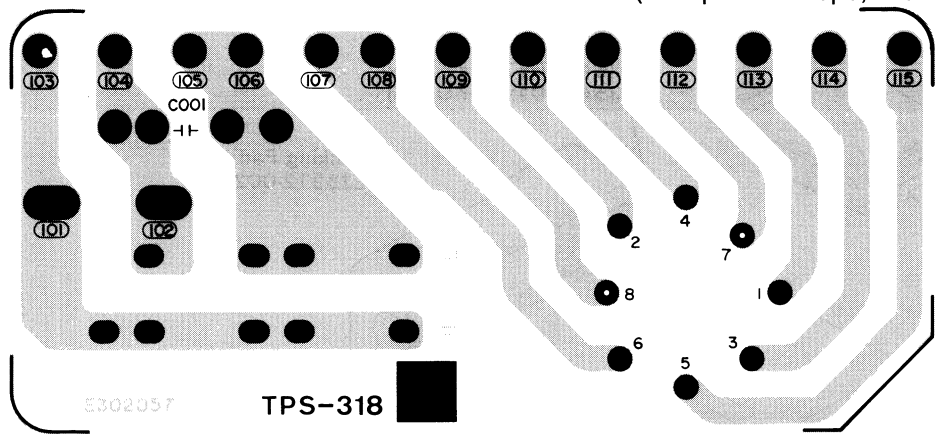

CAPACITORS

△	ITEM	PART NUMBER	DESCRIPTION			AREA
	C001	QCZ9018-103	0.01MF		CERAMIC	

OTHERS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
		E302057-002	PC BOARD	
		E65508-002	TAB	
		E67764-302	WRAPPING TERMINAL	
		E67764-303	WRAPPING TERMINAL	
		E67764-304	WRAPPING TERMINAL	
△		QMC0637-004	AC OUTLET	
△		QSR0085-006U	VOLTAGE SELECTOR	A

△ : SAFETY PARTS

■ END-047A Impedance Selecter PC Board

(for Europe, West Germany, the U.K. and Australia)

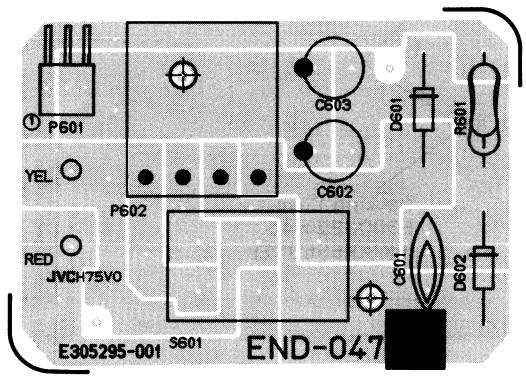

CAPACITORS

△	ITEM	PART NUMBER	DESCRIPTION			AREA
	C603	QETB1JM-107	100MF	63V	ELECTRO	

RESISTORS

△	ITEM	PART NUMBER	DESCRIPTION			AREA
△	R601	QRG012J-102A	1K	1W	O.M.FILM	

DIODES

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	D601	10E2FD-1	ZENER	NIHONINTER	
	D602	10E2FD-1	ZENER	NIHONINTER	

OTHERS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
		EMV5102-004B	PLUG ASSY	
		E305295-001	PC BOARD	
		QMV5004-003K	PLUG ASSY	
	S601	QSS5C22-E03	SLIDE SWITCH	

■ END-026A Power Primary PC Board

(Except for Europe, West Germany, the U.K. and Australia)

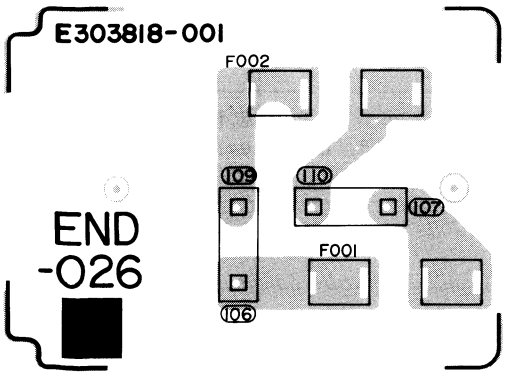

OTHERS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
		EMG7331-001	FUSE CLIP	
		E303818-001	PC BOARD	
		E67764-202	WRAPPING TERMINAL	

Packing Materials and Part Numbers

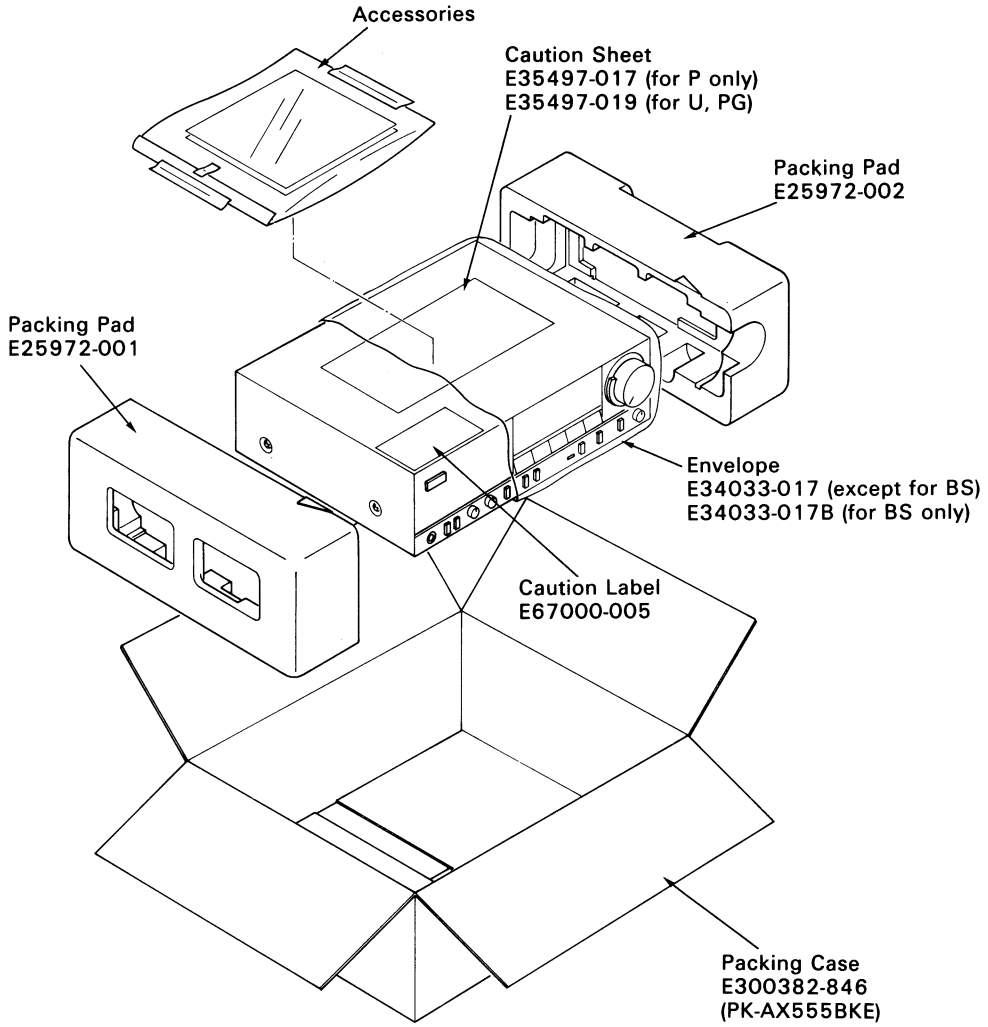

Accessories List

⚠	Parts Number	Parts Name	Description	Areas
	E30580-1432B	Instruction Book		except for BS
	E30580-1432BBS	Instruction Book		BS only
	BT20029C	Warranty Card		A
	BT20098	Audio Warranty Card		A
	BT20064A	Warranty Card		G
	QZL1008-001	Information Sheet		G
	BT20060	Warranty Card		BS
	BT20066	EEC Agency		G,BS
	BT20048B	Warranty Card		P,PG
	BT20046C	Service Information		P,PG
⚠	E04056	Siemens Plug		U,PG
	E41202-2	Envelope	for the Inst.Book, W.Card, etc.	except for BS
	E41202-2B	Envelope		BS only

Note: The Marks for Designated Areas

E ····· Europe
A ····· Australia
G ····· West Germany
BS ····· U.K.
P,PG ····· U.S.Military Market
UE ····· Saudi Arabia
U ····· Other Countries
No Mark indicates all areas.

⚠:Safety Parts